



6 X 8 X 6 Ft Green House Assembly Instructions

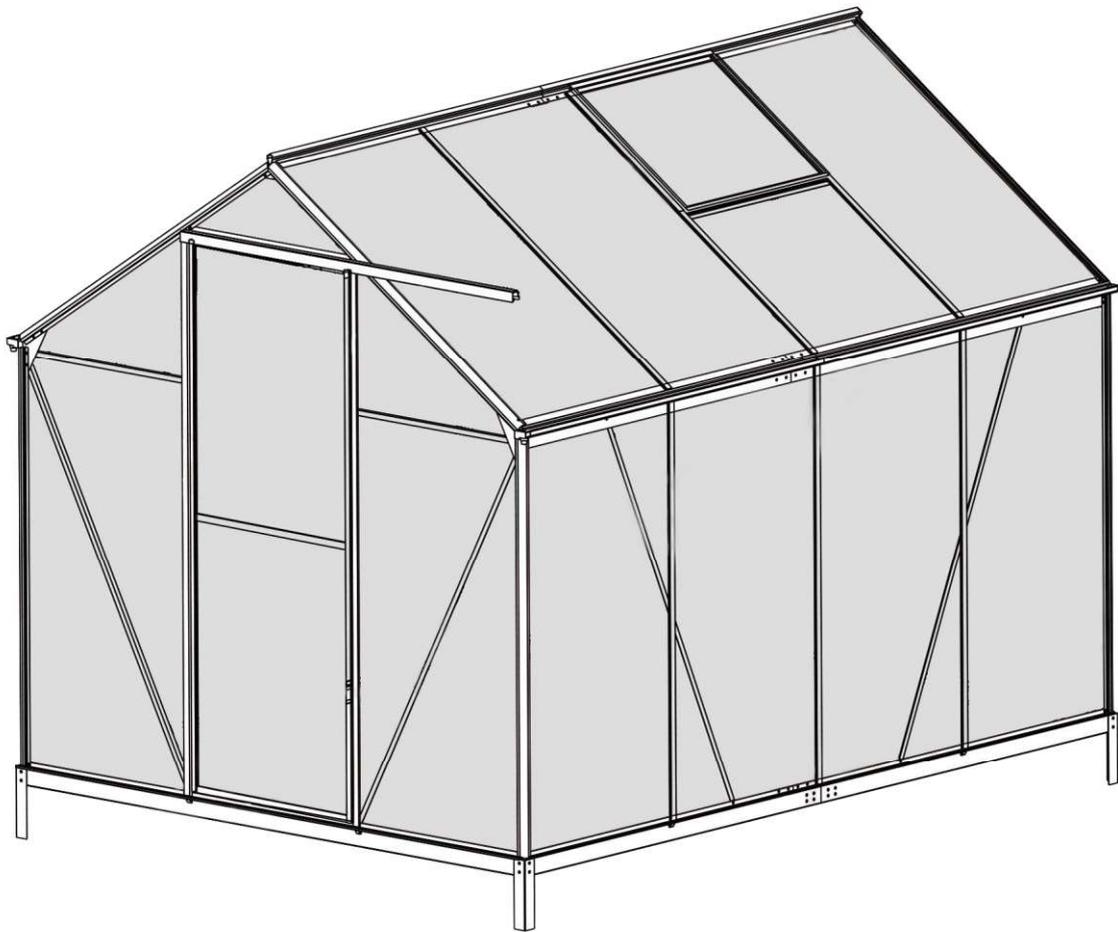

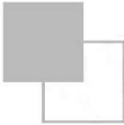

CATALOGUE

◆ General Advice	1
◆ Parts List	3
◆ Installation steps	
1) Front Assembly	5
2) Rear Gable Assembly	10
3) Side Wall Assembly	14
4) Roof Assembly	17
5) Vent Assembly	20
6) Door Assembly	22
7) Base Assembly	25
8) Base Connector Assembly	26

Kindly noted this item come with 2 packages, Please start assembling after receiving all the packages.
Please read the assembly manual and familiarize yourself with the parts and steps before assembling your Greenhouse .

IMPORTANT

The Greenhouse contains parts with sharp edges . Handle with care .
The all parts have sharp edges . Use safety work gloves while the whole assembly.
Do not assemble the greenhouse on a windy day .


Weather notice

The greenhouse must be reinforced under severe weather, such as typhoon, hurricane, sandstorm, etc.
Panel Frame Reinforcement: Use tape in the shape of "x" and then paste on the panel for reinforcement
Foundation Reinforcement: The best option is to use a concrete foundation for firmer installation.
If there is no way to use the concrete foundation to reinforce, it will lead to the deterioration of the wind resistance of the greenhouse
In extreme weather, the weight of the base must be increased by placing heavy objects to enhance wind resistance


NOTICE

It will take at least two adults about 5-6 hours to assemble the greenhouse .
We suggest use electric drill (NOT included) to make the whole assembly more quickly.
Follow the manual step by step .
Keep this manual for future reference .

TOOLS Required (NOT included)

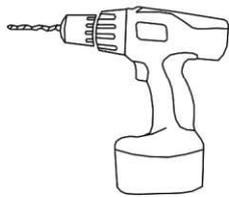

Power Drill

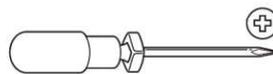


Phillips Screwdriver




Safety Work Gloves



Safety Goggles

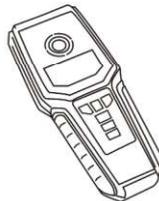

Spirit Level

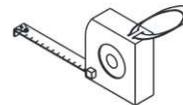

Tape Measure



Step Ladders

GENERAL ADVICE

Note: There are 2 sides films on the Polycarbonate Panel.
One side is clear film, another side is white color film.


Need to Remove 2 side films from all edges before installing the Polycarbonate sheets .

Assembled Foundation Choose

As per your purchase choice , you may receive a greenhouse with or without a prefabricated base kit . Either way , this greenhouse must be secured to a firm base .





- 1.The Base must be level and square .
 - 2.Before assembling the greenhouse , you must prepare a proper foundation.
 - 3.The concrete foundation option is the best option for a stronger installation.**
- Other foundation option will lead to poor wind resistance of the greenhouse.**

Corner Stakes mounted into concrete

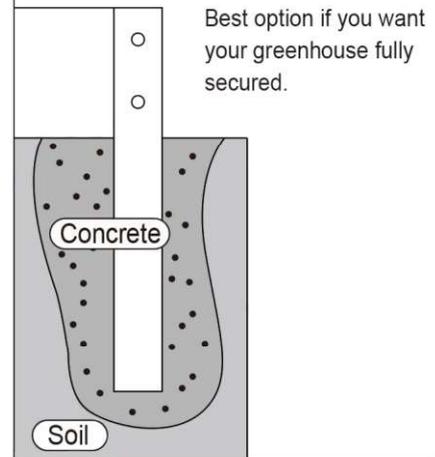

BOLT INSERTION

Several steps in this manual involve inserting Bolts into the groove of Aluminum profiles as a preparation for further installation . Diagrams above illustrate how to use such inserted bolts .

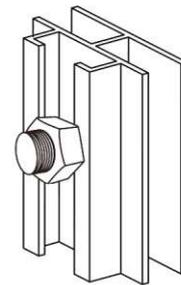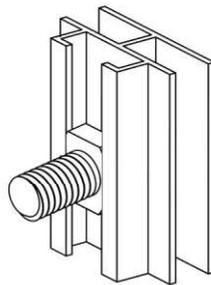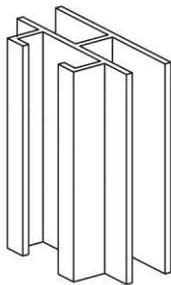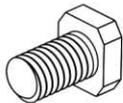

In some steps only bolt or the nut will be used and in other steps the whole set will be used . Check the specific Part List in each step .

SEALING

Sealing the greenhouse by applying glue or tapes between the Polycarbonate sheets and aluminum profiles will keep insects out and provide better stability against wind . Sealant and glue gun are Not included.



PARTS

Identify all parts using the parts list in this manual and labels on the parts . Prepared each part needed for that assembled step before working on that step .











Identify all parts using the parts list in this manual and labels on the parts . Prepared each part needed for that assembled step before working on that step .









Base Part List

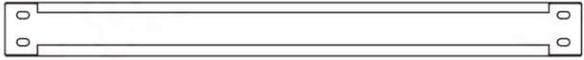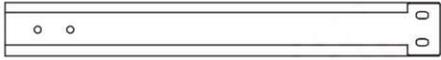B01 2PCS 	B028 4PCS 
--	--





Rear Gable Part List

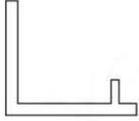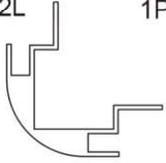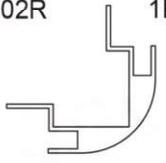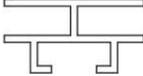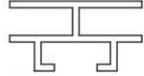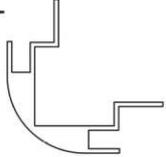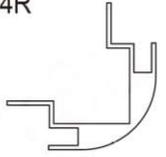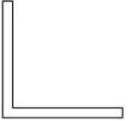RG01 1PC 	RG02L 1PC 	RG02R 1PC 	RG03L 1PC 	RG03R 1PC 
RG04L 1PC 	RG04R 1PC 	RG05 1PC 	RG06 2PCS 	





Front Gable Part List

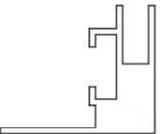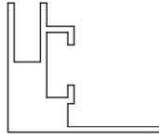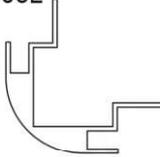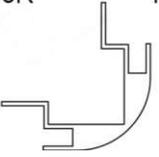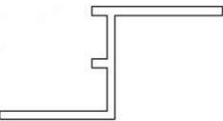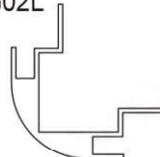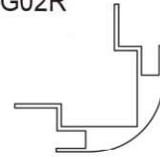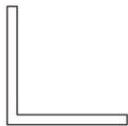FG01 1PC 	FG02L 1PC 	FG02R 1PC 	FG03L 1PC 	FG03R 1PC 
FG04 2PCS 	FG05 1PC 	RG02L 1PC 	RG02R 1PC 	RG06 2PCS 





Side Wall Part List

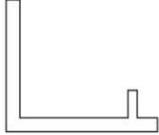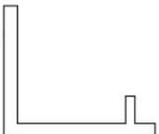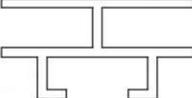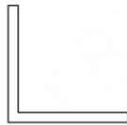SG381 2PCS 	SG382 2PCS 	SG018L 2PCS 
SG018R 2PCS 	SG02 6PCS 	SG04 4PCS 





Roof Part List

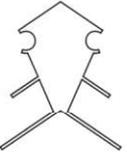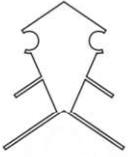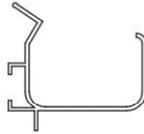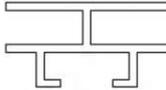R0181 1PC 	R0182 1PC 	R028 4PCS 	R03 6PCS 
---	---	--	--



Vent Part List

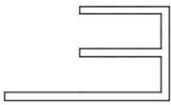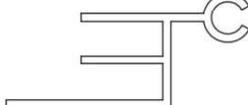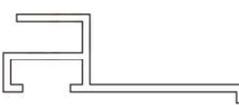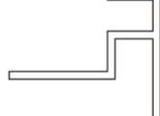V02  1PC	V03  1PC	V04  2PCS	V016  1PC	V017  1PC
---	---	--	---	--


Door Part List

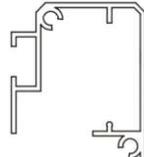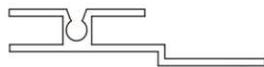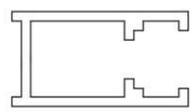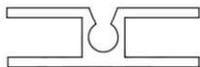D01  1PC	D02  1PC	D03  2PCS	D04  2PCS
---	---	---	--

Connector Part List

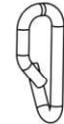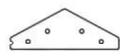BJ01 4PCS 	BJ02 2PCS 	BJ03 18PCS 	BJ04 2PCS 	BJ05 4PCS 	BJ06 2PCS 	BJ07 2PCS 	BJ08 1PC 
--	--	---	--	--	---	--	---



Screw Part List

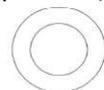LD01 4PCS  M6X18	LD02 164PCS  M6X12	LD03 10PCS  ST3.5X25	LD04 4PCS  M4X15	DP01 170PCS  M6	
LD05 4PCS 	LD06 32PCS  M4.2x25	LD07 4PCS  ST3.2x12	LM01 170PCS  M6	LM02 2PCS  M4	LM03 4PCS  M4

Other Part List


KT 13PCS 	GL01 2PCS 	TP01 2PCS 	CT01 1PC 	CT02 1PC 	SL01 2PCS 
SL04 2PCS 	SL05 2PCS 	SL06 1PCS 	SL07 32PCS 	SL08 32PCS 	SL09 1PCS 
KG01 2PCS 	SL10 2PCS 	ZT 1PCS 	ZD 2PCS 		

PC Panel Part List
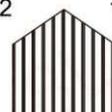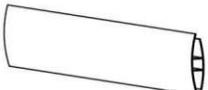
<p>P01 1PC</p>  <p style="text-align: center;">8.8"x22.7"x0.16"</p>	<p>P02 1PC</p>  <p style="text-align: center;">25.7"x23.8"x0.16"</p>	<p>P03 1PC</p>  <p style="text-align: center;">23"x24"x0.16"</p>	<p>P04 2PC</p>  <p style="text-align: center;">17.6"x23.8"x0.16"</p>	<p>P05 2PC</p>  <p style="text-align: center;">17.6"x23.8"x0.16"</p>
<p>P06 2PC</p>  <p style="text-align: center;">30.7"x24.5"x0.16"</p>	<p>P07 7PC</p>  <p style="text-align: center;">47"x24"x0.16"</p>	<p>P08 5PC</p> 	<p>P09 1PC</p>  <p style="text-align: center;">22"x20.4"x0.16"</p>	
<p>P10 13PC</p>  <p style="text-align: center;">48.4"x24"x0.16"</p>				

Front Gable Assembly


FG01 1PC	FG02L 1PC	FG02R 1PC	FG03L 1PC	FG03R 1PC	FG04 2PCS
FG05 1PC	RG02L 1PC	RG02R 1PC	RG06 2PCS	BJ05 2PCS	BJ04 1PC
P04 1PC	P05 1PC	P01 1PC	P08 2PCS	KT 2PCS	LD02 20PCS
LM01 20PCS	DP01 20PCS	P10 2PCS 48.4"x24"x0.16"			
17.6"x23.8"x0.16"	17.6"x23.8"x0.16"	8.8"x22.7"x0.16"			M6x12
					M6
					M6

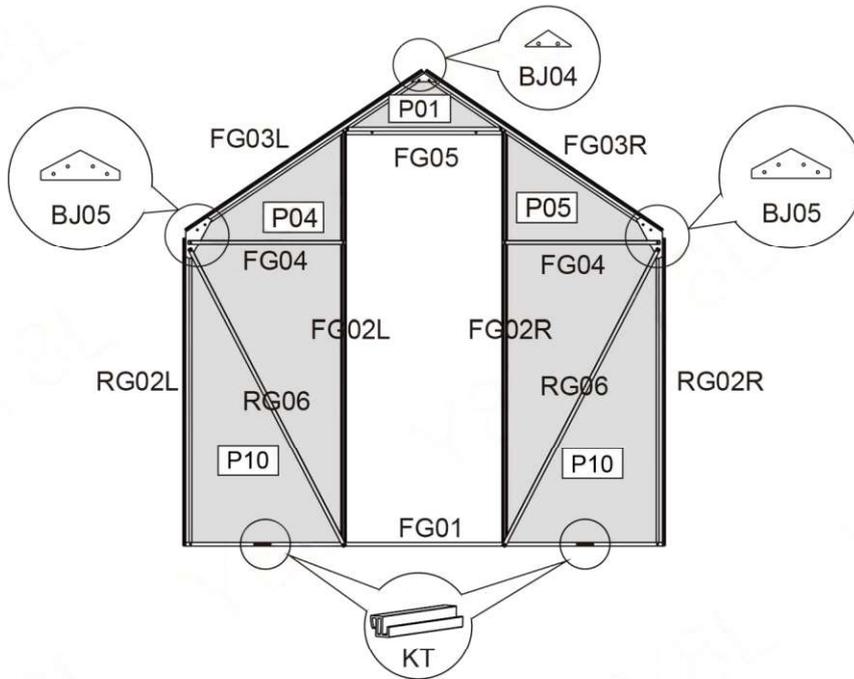

STEP 1


Connect RG02L, FG01 and RG02R with Nut LM01 Bolt LDO2 and Washer DP01.

RG02L*1
RG02R*1
FG01*1
LD02*2
LM01*2
DP01*2

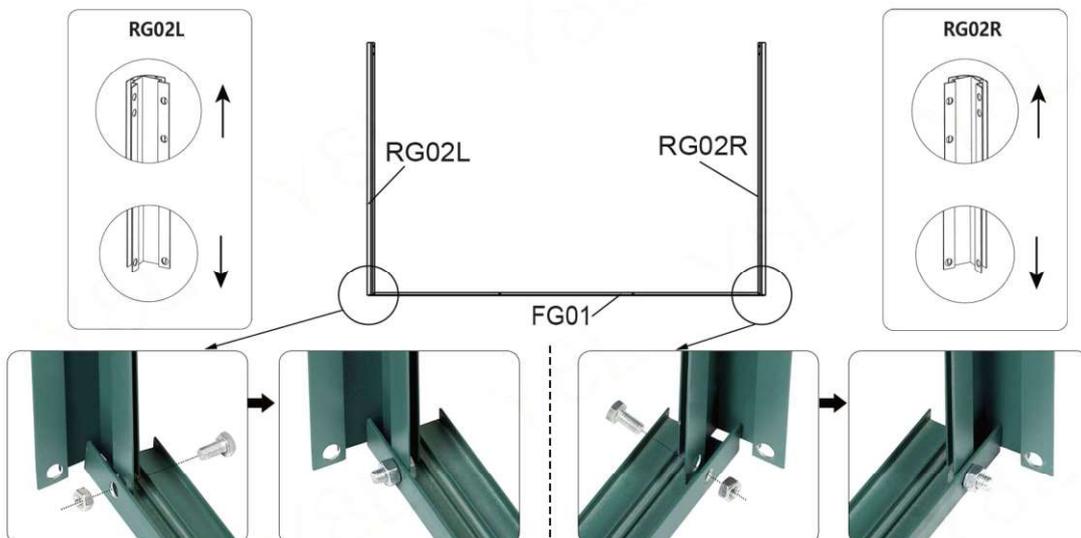

STEP 2

FG02L*1
FG02R*1
RG06*2
LD02*4
LM01*2
DP01*2

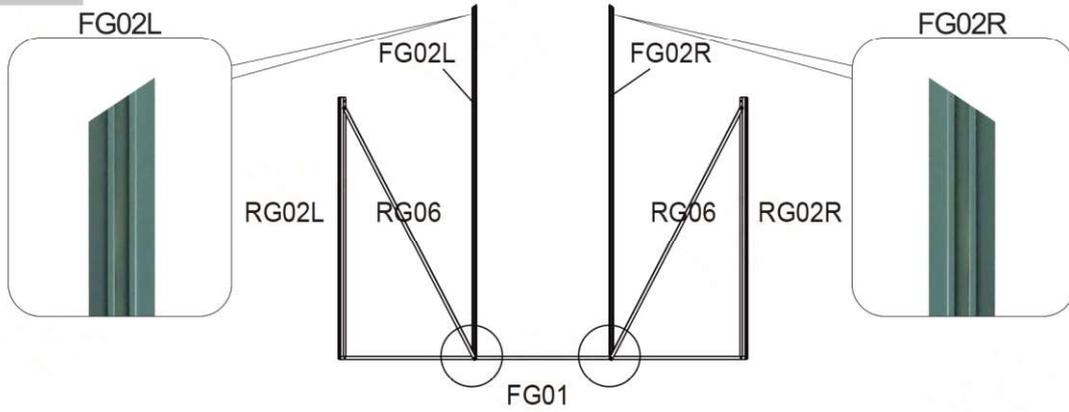


1. The grooves of FG02L and FG02R need to insert 2 bolts LD02 each in advance. Don't screw the nuts.



2. Put FG02L and FG02R into the groove of FG01.


3. Connect FG02R, FG01 RG06 with one of the Pre-inserted bolt LD02, and tighten with a nut.

4. Connect FG02L, FG01 RG06 with one of the Pre-inserted bolt LD02, and tighten with a nut.

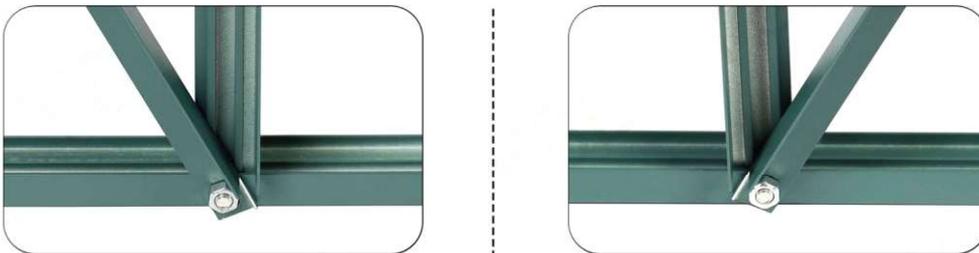


STEP 3

FG04*2
LD02*4
LM01*6
DP01*6

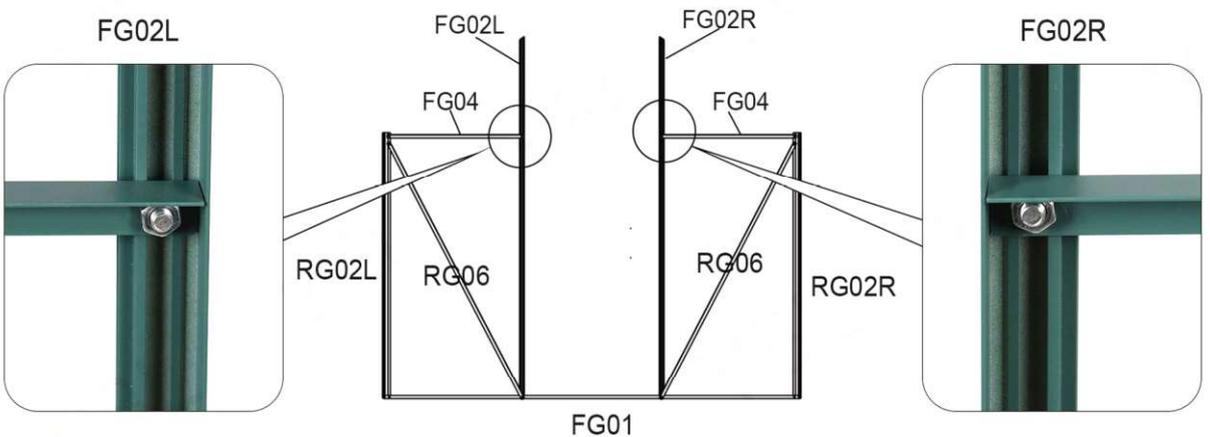


1. Connect FG02R, FG04 with one of the Pre-inserted bolt LD02, and tighten with a nut. Connect FG02L, FG04 with one of the Pre-inserted bolt LD02, and tighten with a nut.

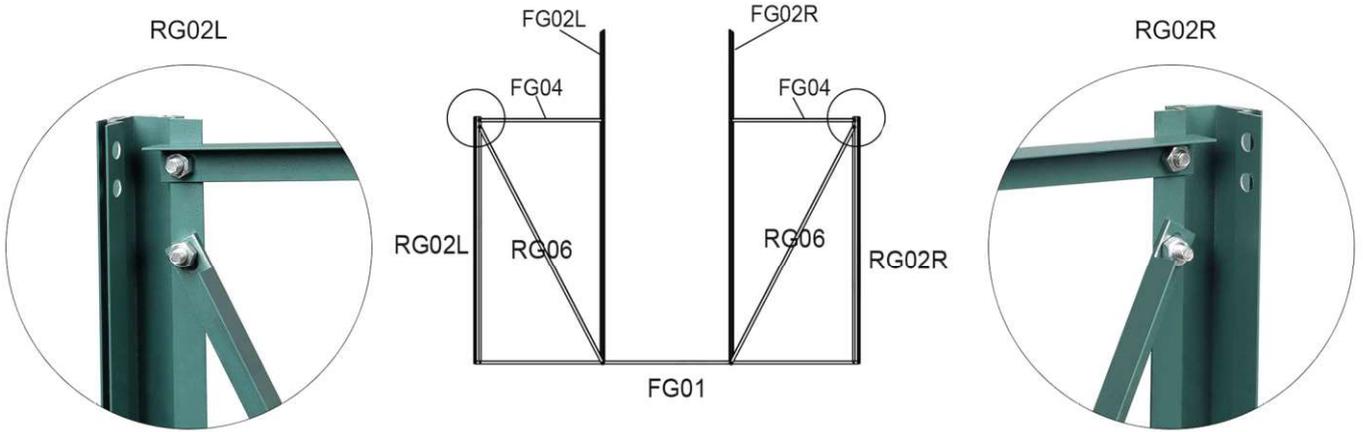




2. Connect FG04 with RG02R, FG04 with RG02L by Bolt LD02 Nut LM01 and Washer DP01
3. Connect RG06 with RG02R, RG06 with RG02L by Bolt LD02 Nut LM01 and Washer DP01

STEP 4

P10*2
P04*1
P05*1
P08*2
KT*2




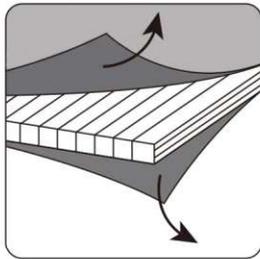


The clear film needs to be exposed to sunlight

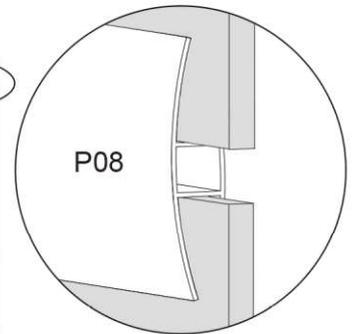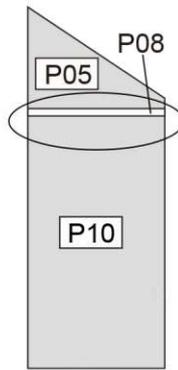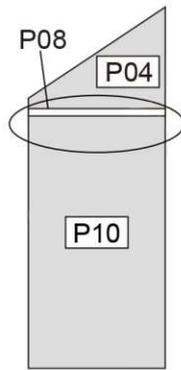

1. Connect panel P10 and panel P04 (P05) with P08.

Note: Need leave a little distance when connected panel

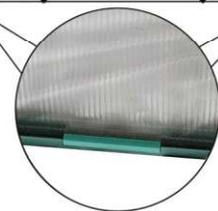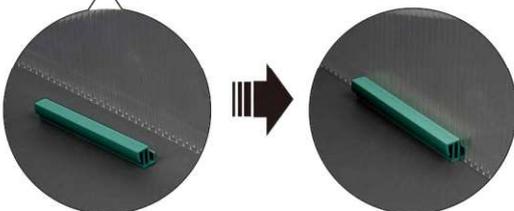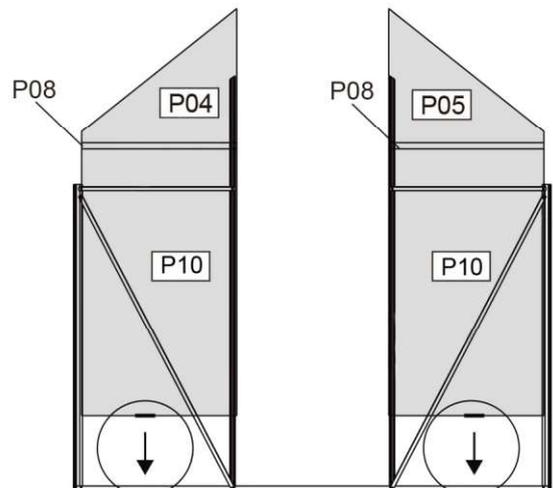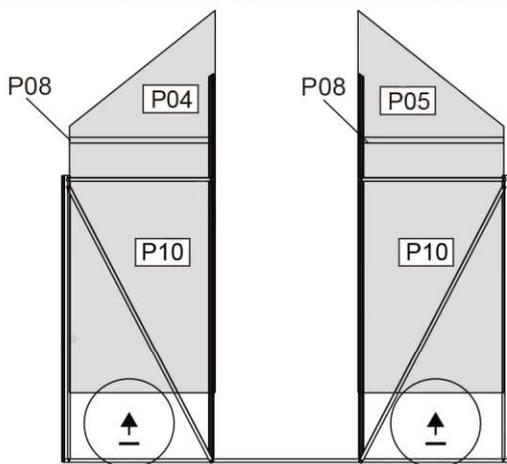


2. Insert the assembled PC panel from above the groove.



Note: In the process of inserting the PC Panel, if it is too loose or too tight, you can loosen the nut at the relevant position to properly adjust the position and spacing of the PC Panel, so that the PC panel can be inserted and installed smoothly.


STEP 5

FG03L*1
FG03R*1
LD02*8
LM01*8
DP01*8

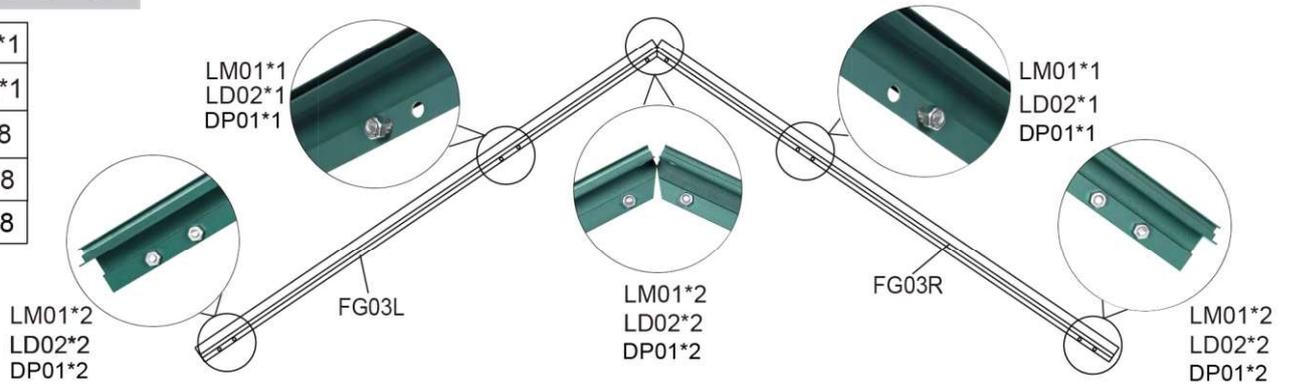

Do not tighten the nut . Only loosely screw it onto the thread .


STEP 6

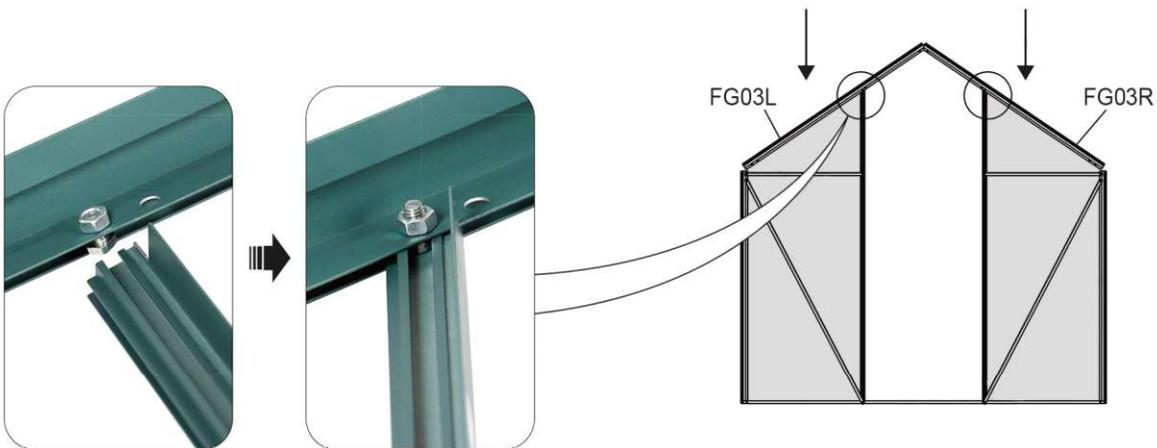

Insert the PC panel into the reserved groove of FG03L and FG03R.
Then Press it down into place.
The bolt LD02 need to insert into the grooves and fasten the nuts.

STEP 7


BJ04*1
BJ05*2

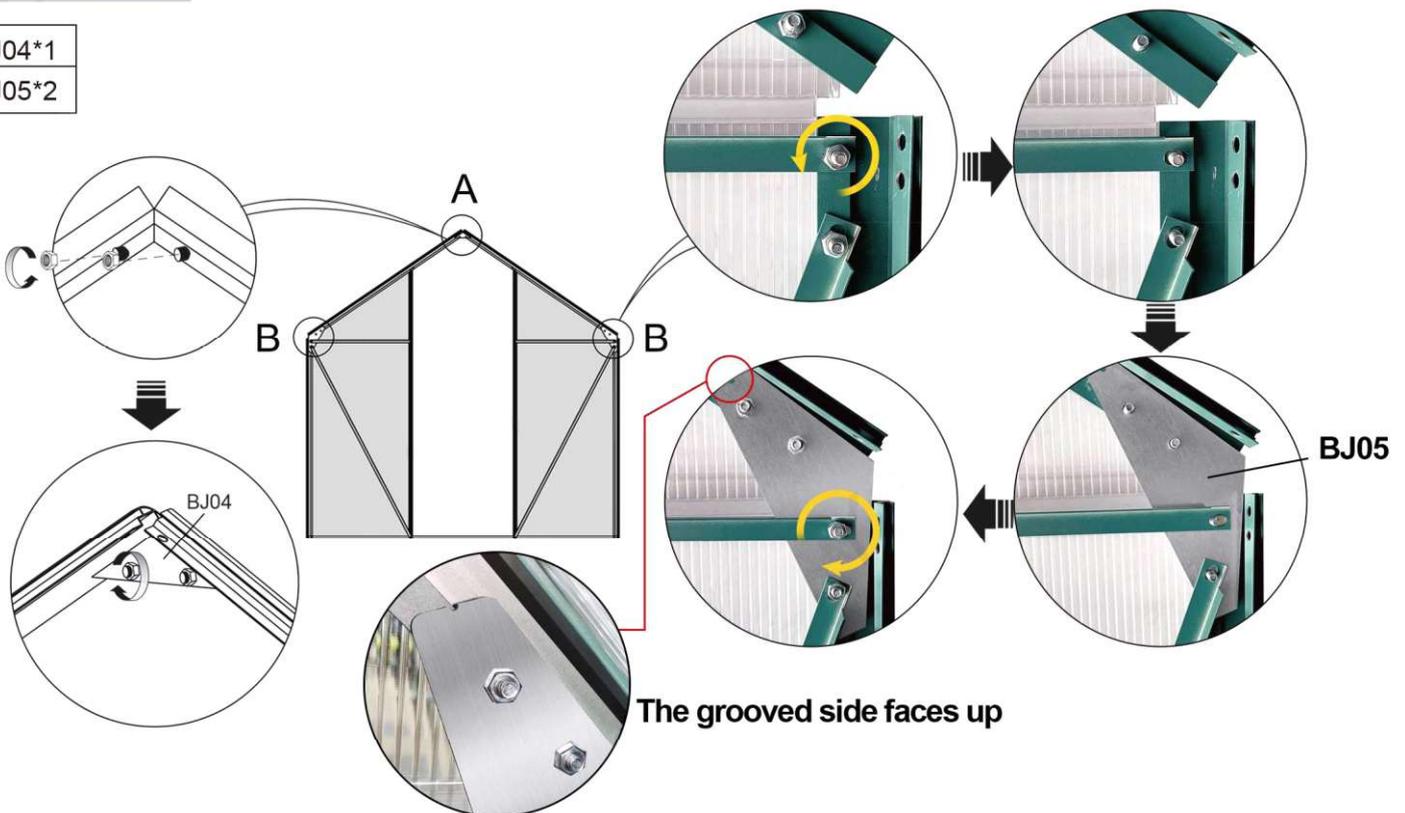

1. Loosen the nuts LM01 in position marked A, install the connecting piece BJ04 and tighten the nut LM01.
2. Loosen the nuts LM01 in position marked B, install the connecting piece BJ05 and tighten the nut LM01.

STEP 8

FG05*1
LD02*2
LM01*2
DP01*2

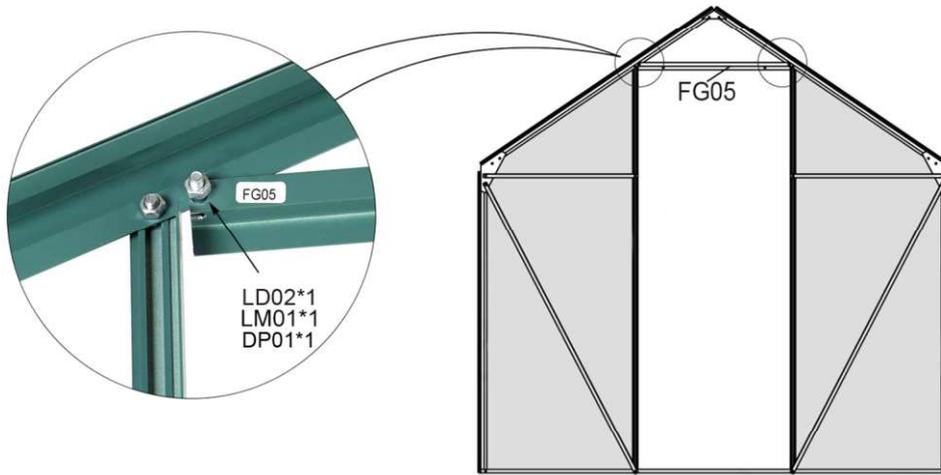

Install FG05

Do not tighten the nut . Only loosely screw it onto the thread .




STEP 9

P01*1










Insert PC Panel P01 and tighten the nut.


Tips: You can first snap two sides of the PC panel labeled 1 up into the notch, and then snap this side of the PC panel labeled 2 into the notch of the FG05. Finally, push the FG05 upward to fix the PC panel and then tighten the nut.

For detailed steps, please see the installation video.

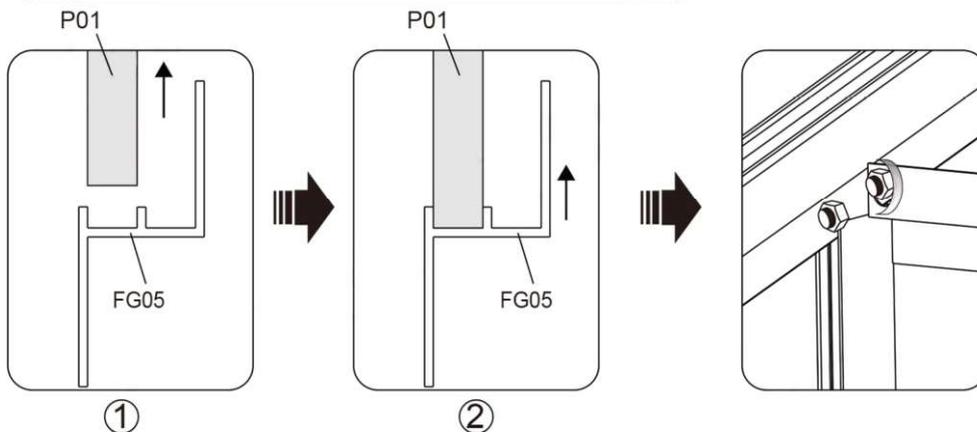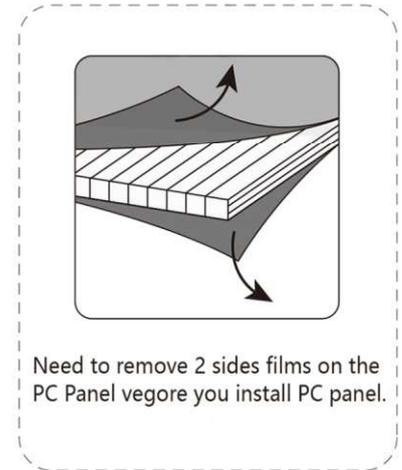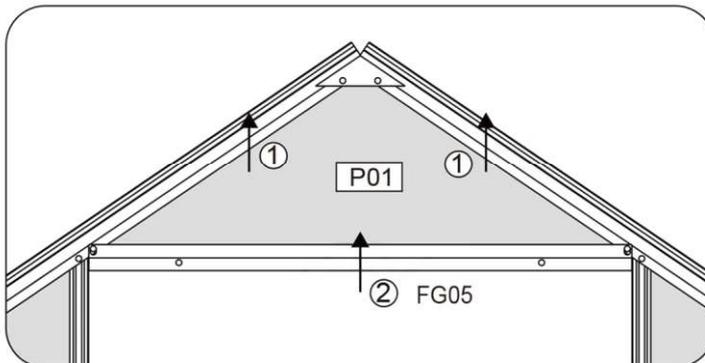

Rear Gable Assembly

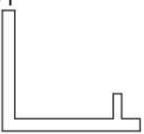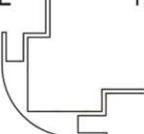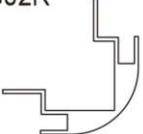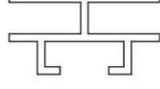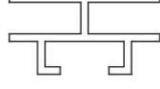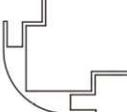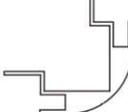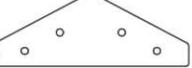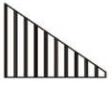
RG01  1PC	RG02L  1PC	RG02R  1PC	RG03L  1PC	RG03R  1PC	
RG05  1PC	RG06  2PCS	RG04L  1PC	RG04R  1PC	BJ04  1PC	
BJ05  2PCS	P10  3PCS 48.4"x24"x0.16"	P02  1PC 25.7"x23.8"x0.16"	P04  1PC 17.6"*23.8"*0.16"	P05  1PC 17.6"*23.8"*0.16"	
P08  3PCS	KT  3PCS	LD02  14PCS M6x12	LD01  4PCS M6x18	LM01  18PCS M6	DP01  18PCS M6

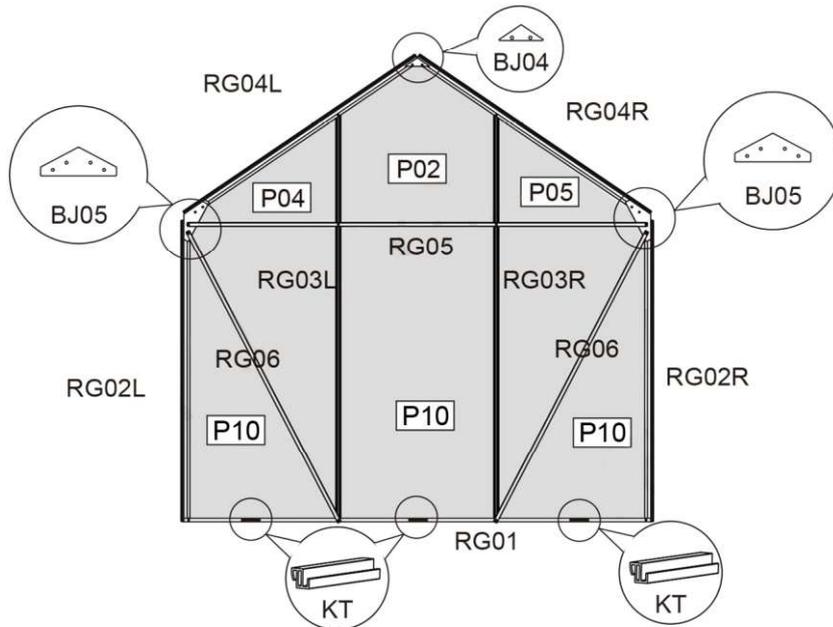


STEP 1

Connect RG02L, RG01 and RG02R with Nut LM01 and Bolt LD02.


RG02L*1
RG02R*1
RG01*1
LD02*2
LM01*2
DP01*2

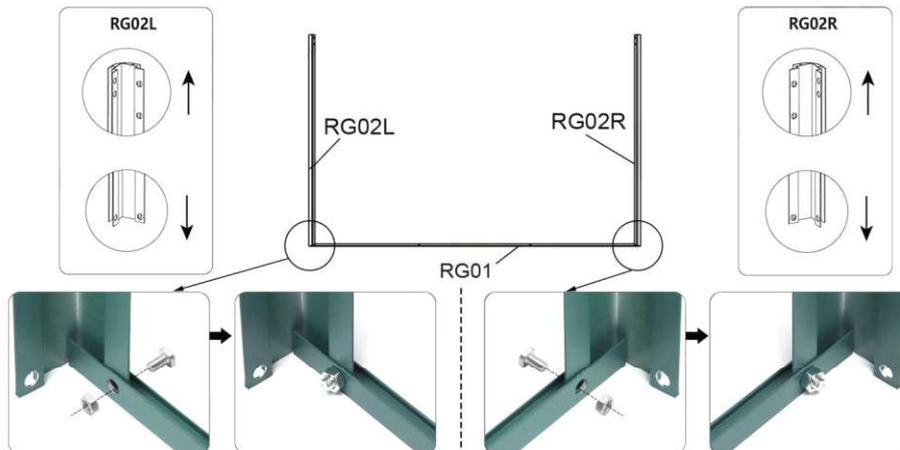

STEP 2

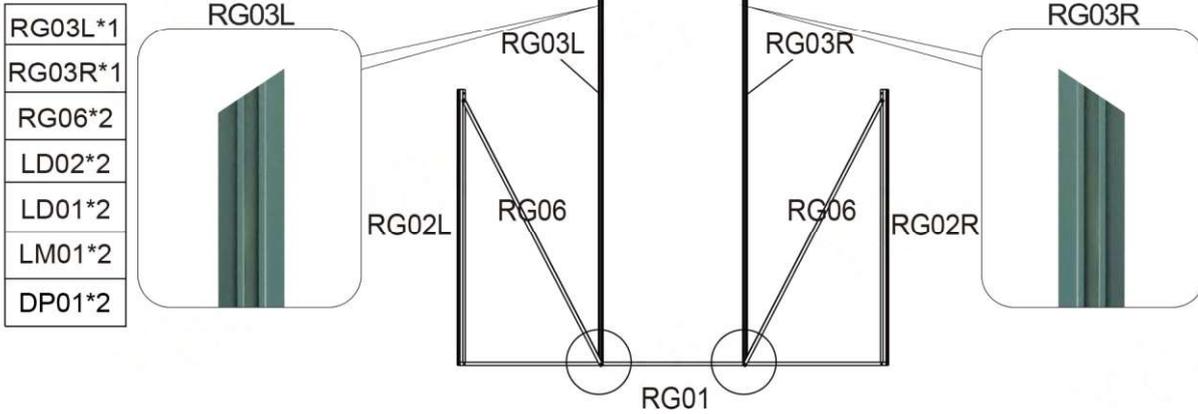


1. The grooves of RG03L and RG03R need to insert 2 bolts LD01 LD02 each in advance. LD01 is prepared for step 3. Don't screw the nuts.

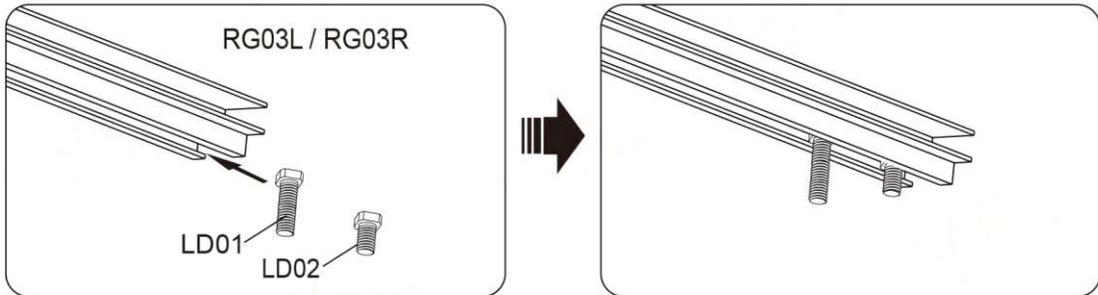


2. Put RG03L and RG03R into the groove of RG01.

3. Connect RG03R, RG01 RG06 with one of the Pre- inserted bolt LD02, and tighten with a nut.


4. Connect RG03L, RG01 RG06 with one of the Pre- inserted bolt LD02, and tighten with a nut.

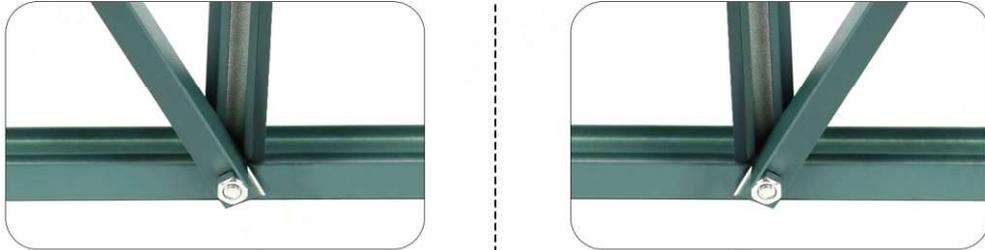

STEP 3

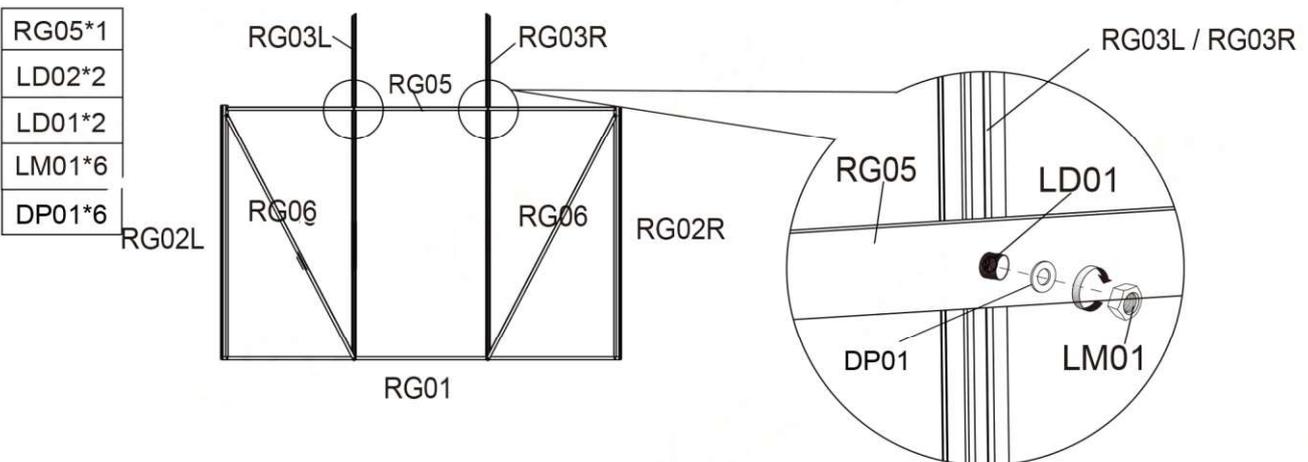


1. Connect RG03R, RG05 with one of the Pre- inserted bolt LD01, and tighten with a nut. Connect RG03L, RG05 with one of the Pre- inserted bolt LD01, and tighten with a nut.

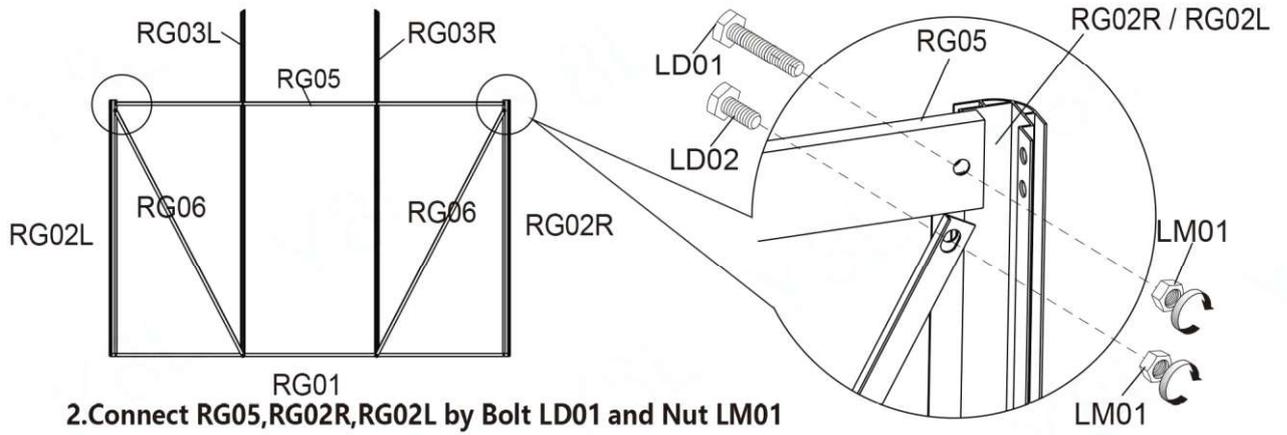


2. Connect RG05, RG02R, RG02L by Bolt LD01 and Nut LM01
3. Connect RG06, RG02R, RG02L by Bolt LD02 and Nut LM01

STEP 4

P02*1
P10*3
P04*1
P05*1
P08*3
KT*3

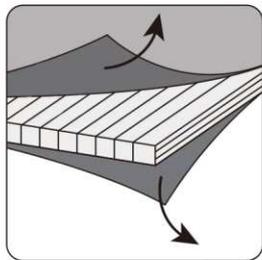


The clear film needs to be exposed to sunlight

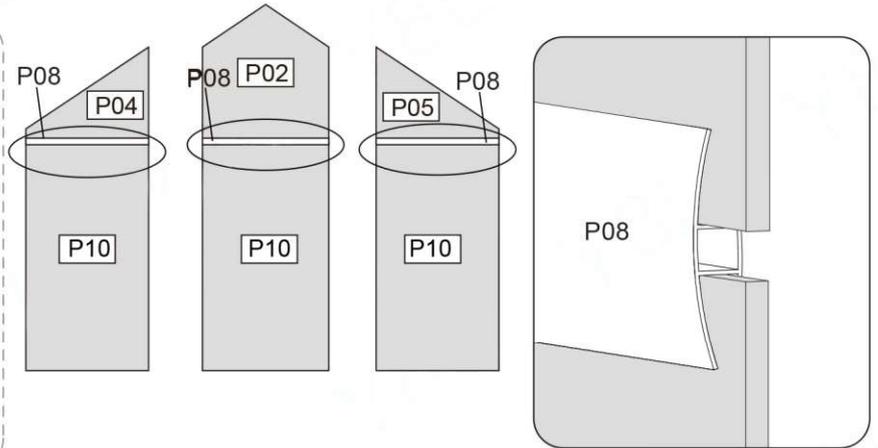

1. Connect panel P02 and panel P04 (P05) with P08
2. Connect panel P02 and panel P05 with P08



Note: Need leave a little distance when connected panel

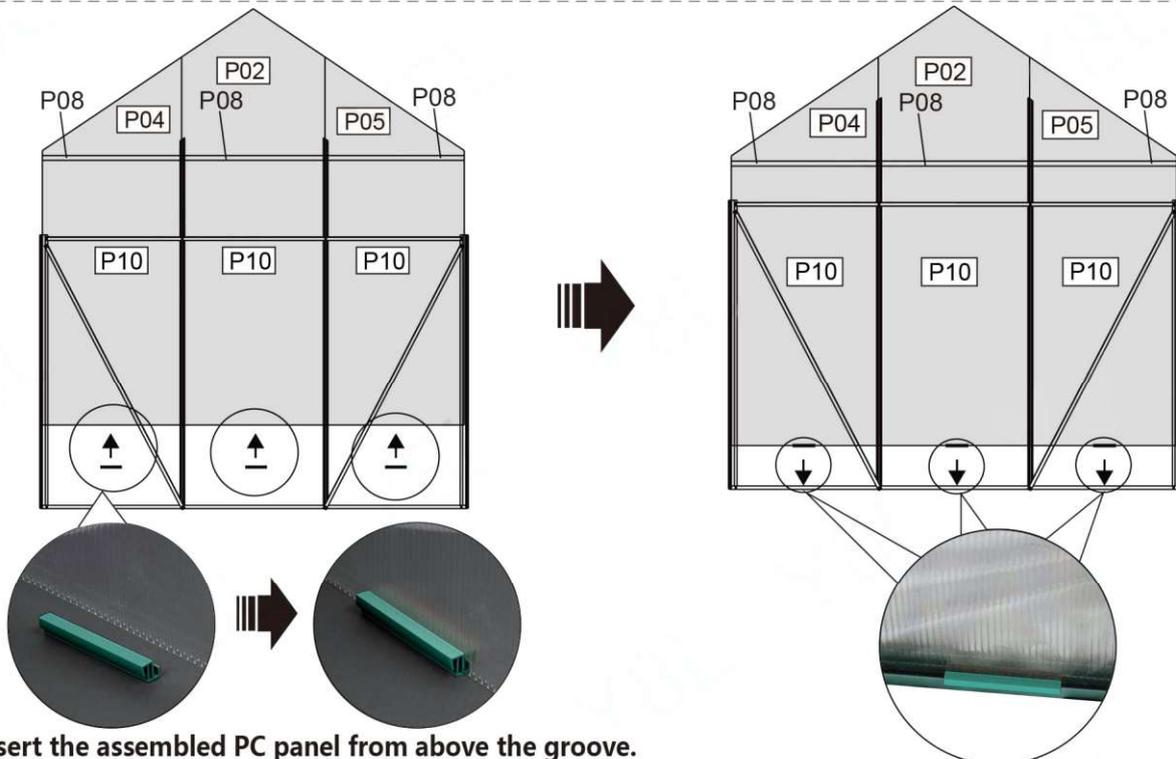


3. Insert the assembled PC panel from above the groove.



Note: In the process of inserting the PC Panel, if it is too loose or too tight, you can loosen the nut at the relevant position to properly adjust the position and spacing of the PC Panel, so that the PC panel can be inserted and installed smoothly.


STEP 5

RG04L*1
RG04R*1
LD02*8
LM01*8
DP01*8

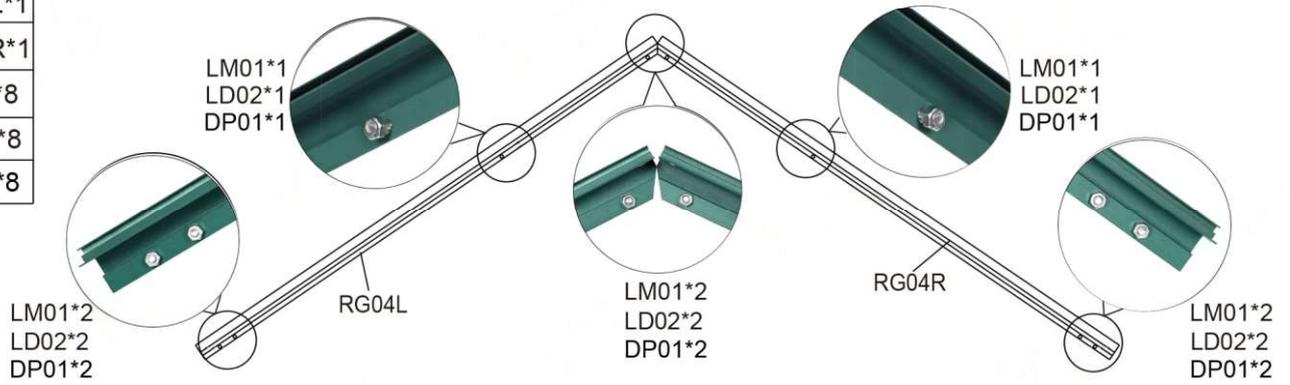

Do not tighten the nut . Only loosely screw it onto the thread .

STEP 6

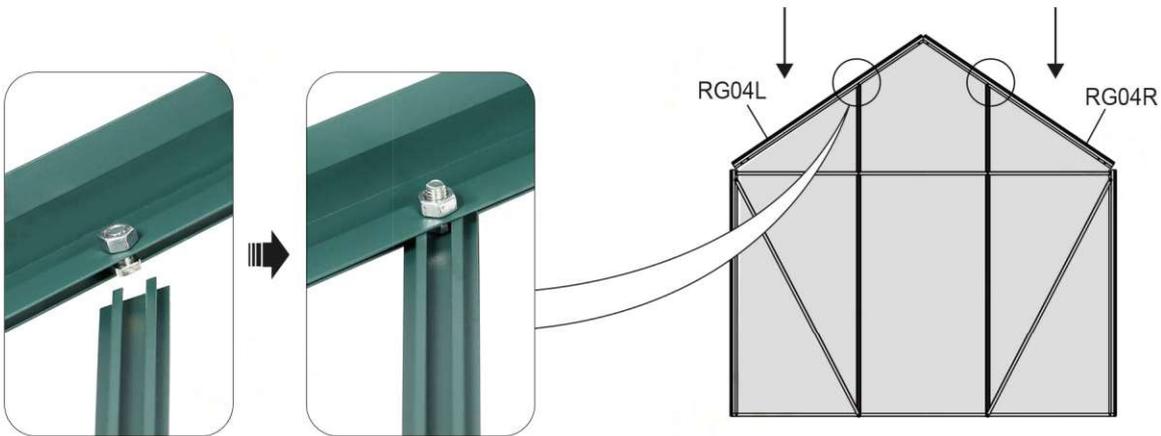


Insert the PC panel into the reserved groove of RG04R and RG04L.
Then Press it down into place.

The bolt LD02 need to insert into the grooves and fasten the nuts.

STEP 7


BJ04*1
BJ05*2

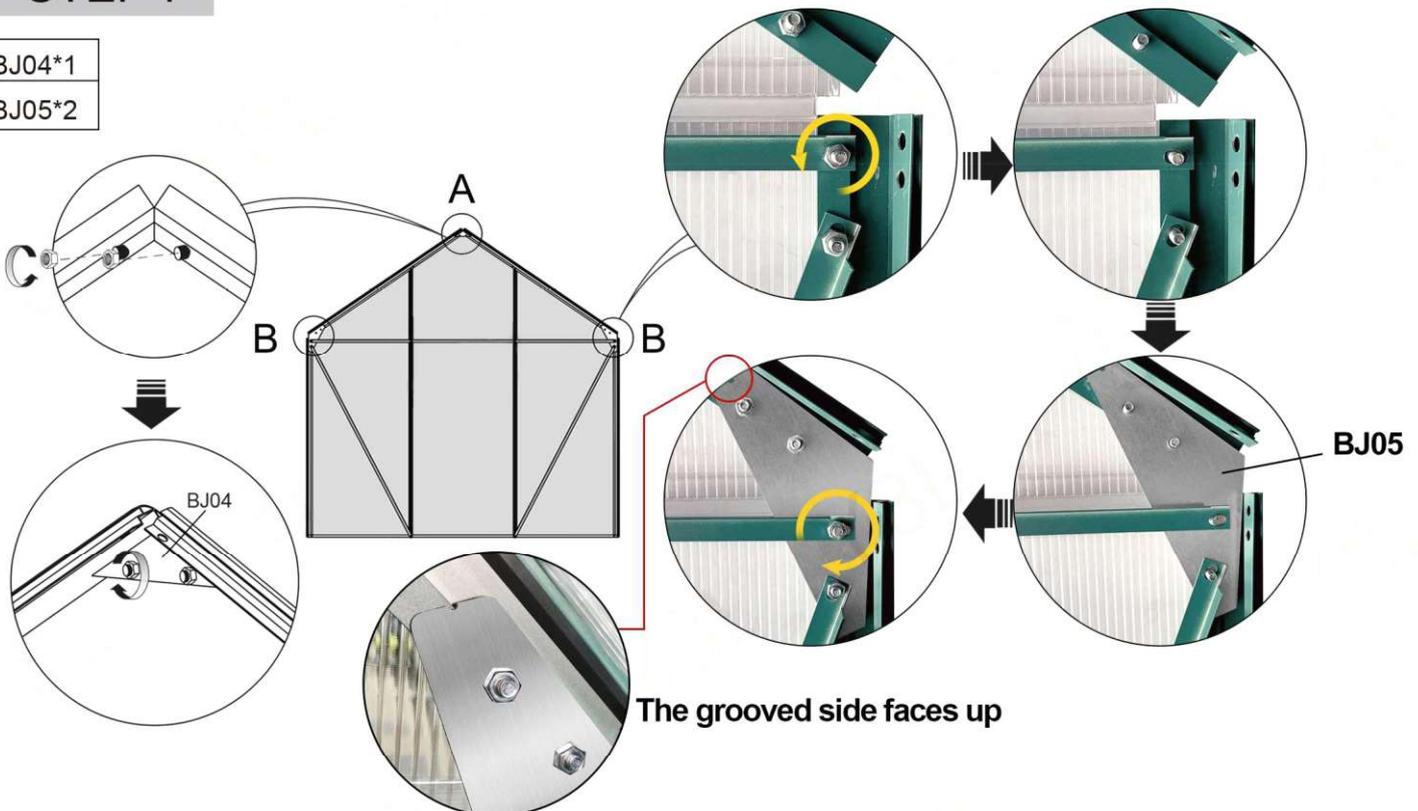

- 1.Loosen the nuts LM01 in position marked A,intall the connecting peice BJ04 and tighten the nut LM01.
- 2.Loosen the nuts LM01 in position marked B,intall the connecting peice BJ05 and tighten the nut LM01.


Side Wall Assembly

SG02 6PCS	SG04 4PCS	SG381 2PCS	SG382 2PCS	SG018L 2PCS	SG018R 2PCS	KT 8PCS
BJ06 2PCS	BJ07 2PCS	P10 8PCS	LD02 64PCS	LM01 64PCS	DP01 64PCS	
		 48.4"x24"x0.16"	 M6x12	 M6	 M6	

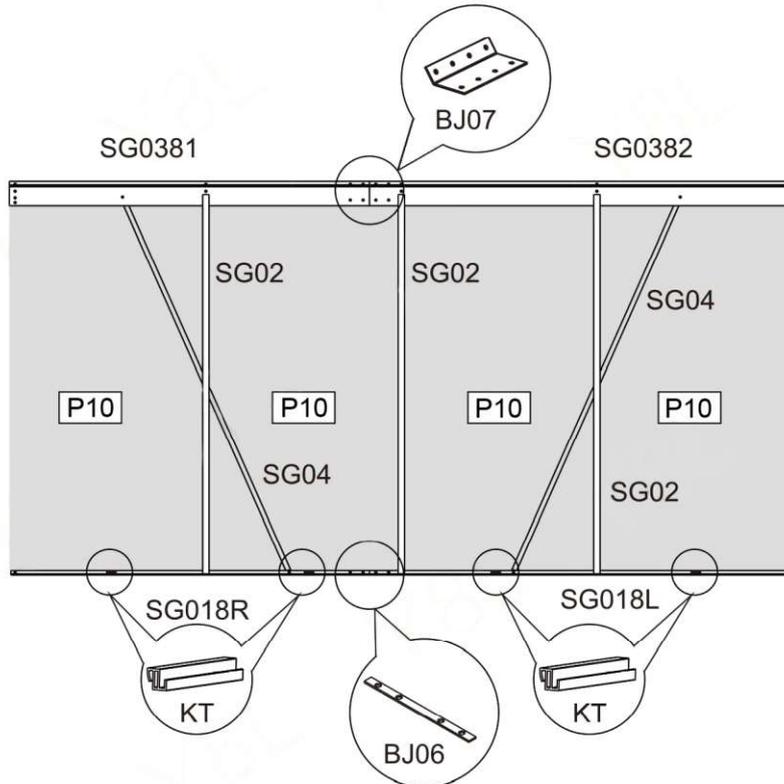

STEP 1

SG0381*2
SG0382*2
BJ07*2
LD02*28
LM01*28
DP01*28

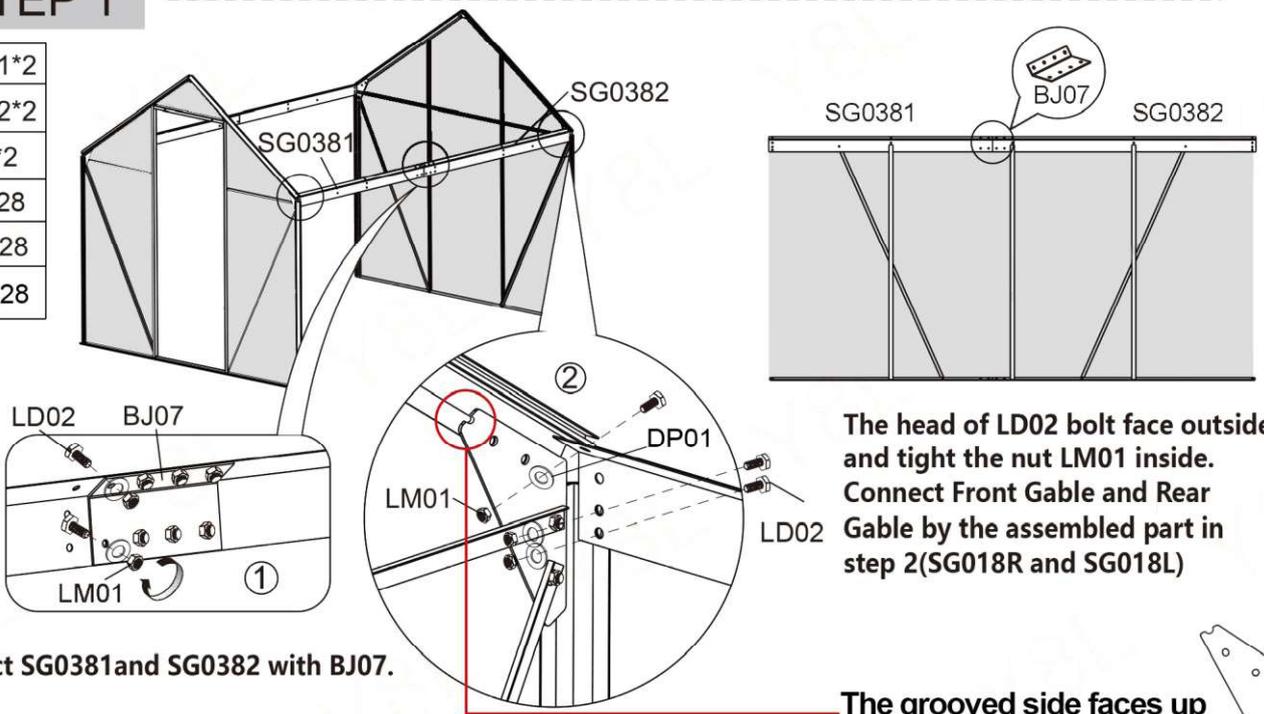


Connect SG0381 and SG0382 with BJ07.

The head of LD02 bolt face outside, and tight the nut LM01 inside. Connect Front Gable and Rear Gable by the assembled part in step 2(SG018R and SG018L)

The grooved side faces up

STEP 2

SG018R*2
SG018L*2
BJ06*2
LD02*12
LM01*12
DP01*12

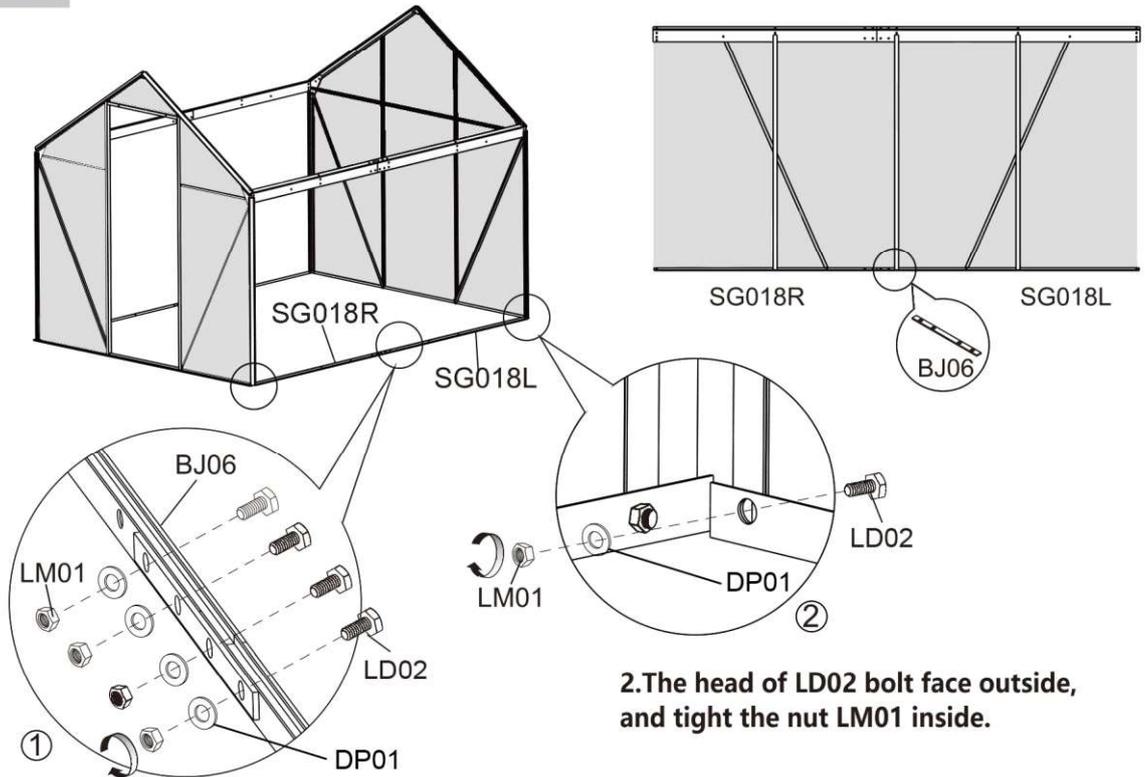


1. Connect SG018R and SG018L with BJ06.

2. The head of LD02 bolt face outside, and tight the nut LM01 inside.


STEP 3

The following shows only one side wall installation, the other wall side should install in the same method.

SG02*6
LD02*16
LM01*12
SG04*4
DP01*12

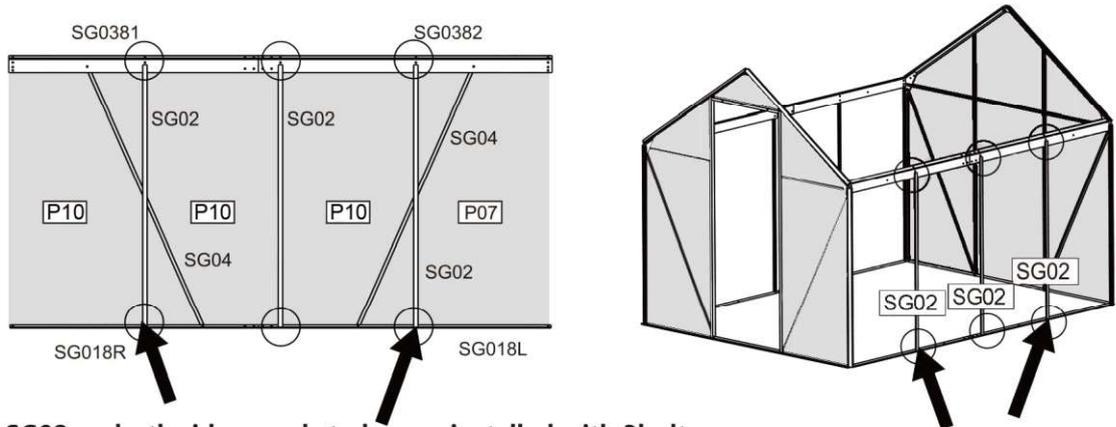


The SG02 on both sides needs to be pre-installed with 3bolts.
The bolt in the middle is prepared for next step. Don't screw the nuts.
The SG02 in the middle installs 2 bolts.

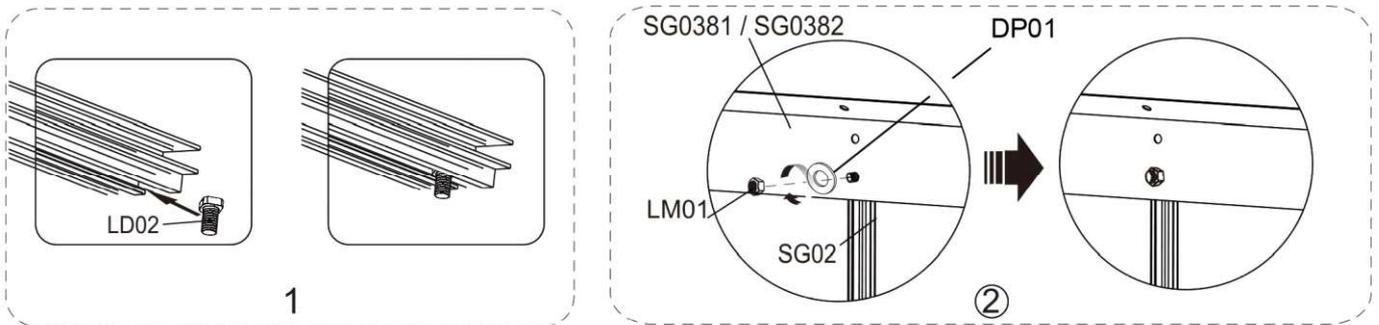


STEP 4

The following shows only one side wall installation, the other wall side should install in the same method. Connect SG02 and SG04 with one of the Pre-inserted bolt LD02 in SG02, and tighten with a nut.

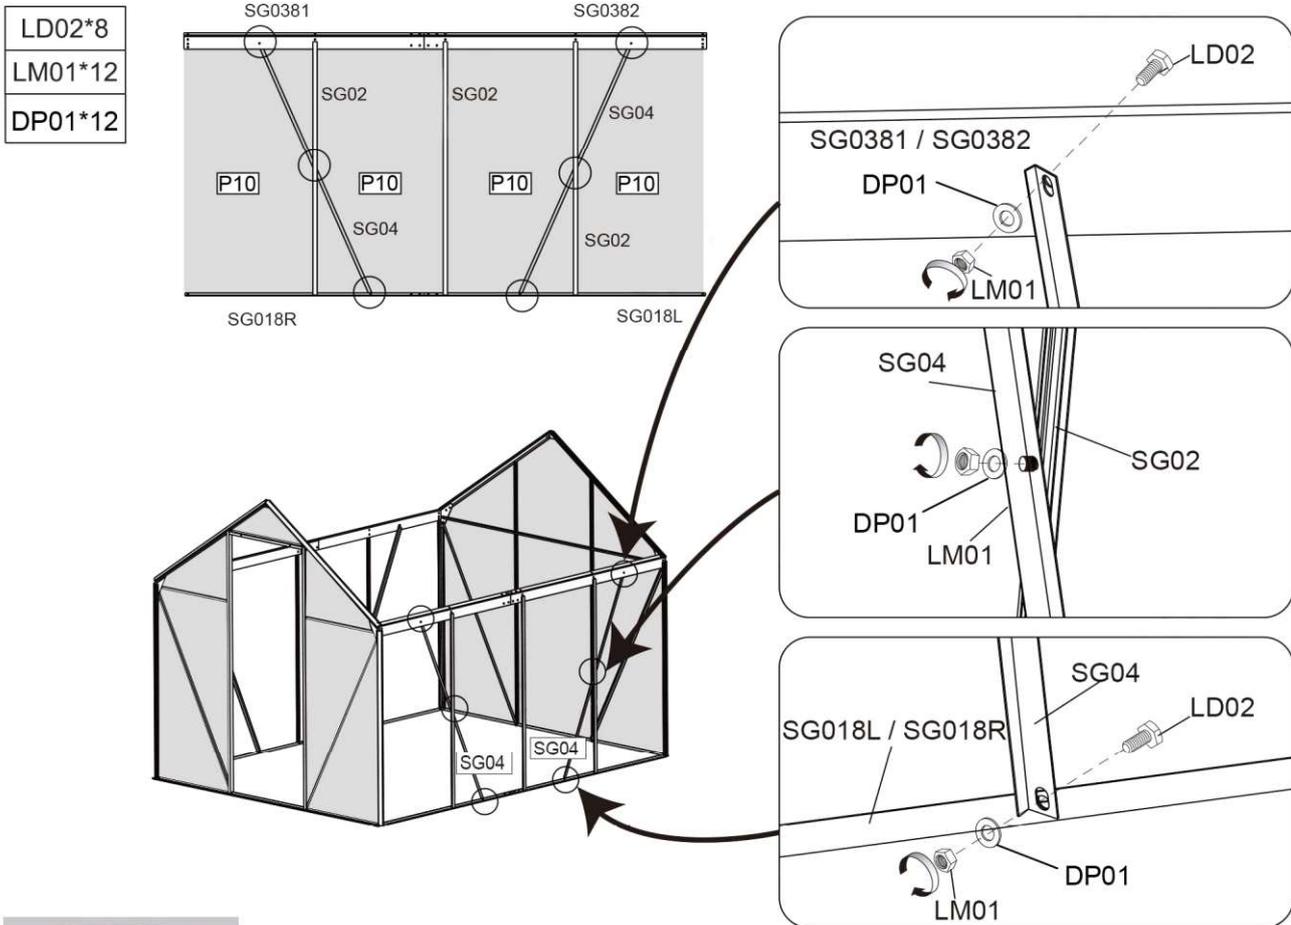

STEP 5

Insert the assembled PC panel P10 from above the groove.

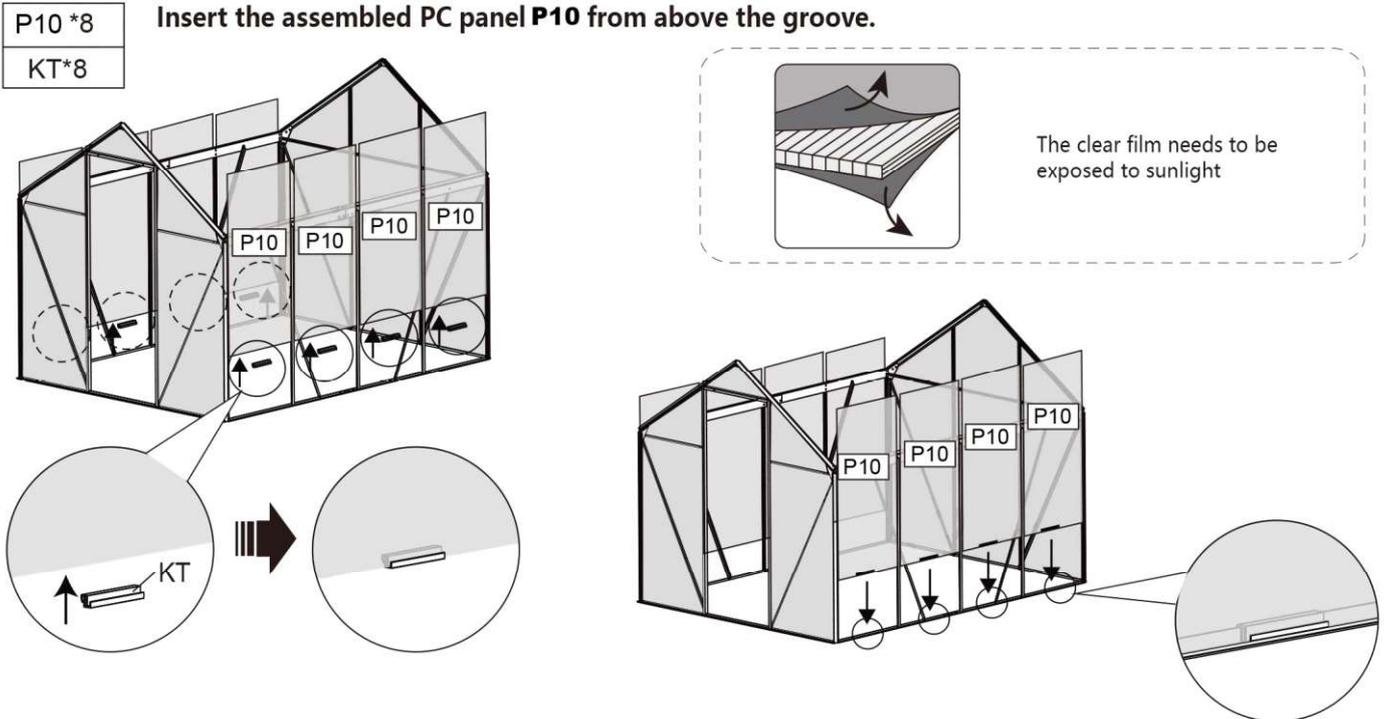


Note: In the process of inserting the PC Panel, if it is too loose or too tight, you can loosen the nut at the relevant position to properly adjust the position and spacing of the PC Panel, so that the PC panel can be inserted and installed smoothly.

Roof Assembly


R03 6PCS 	R028 4PCS 	R0181 1PC 	R0182 1PC 	P03 1PC 23"x24"x0.16"			
P07 7PCS 43.5"x24"x0.16"	BJ08 1PC 	SL04 2PCS 	SL05 2PCS 	LD01 12PCS M6x12	LD02 24PCS M6x12	LD05 4PCS M6	LM01 34PCS
DP01 34PCS M6							

STEP 1

R0181*1
R0182*1
LD02*12
LM01*12
BJ08*1
DP01*12

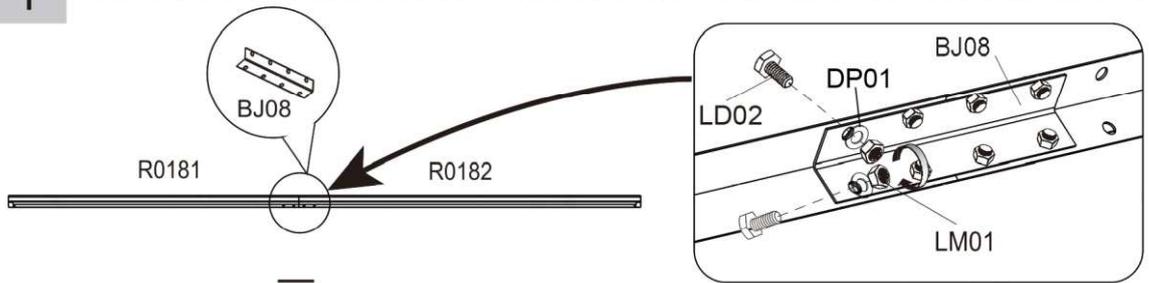


Firstly, connect R0181 and R0182 with BJ08.

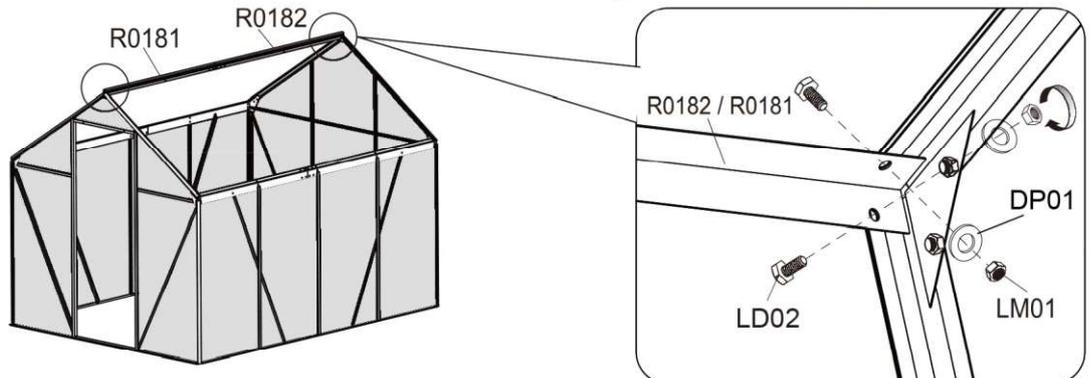

Connect Front Gable and Rear Gable by the assembled part in step 1 (R0181 and R0182)




STEP 2

R03 *6
LD02*18
LM01*12
DP01*12



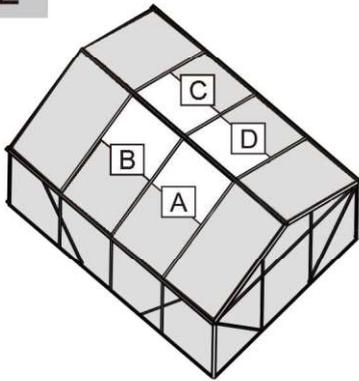


Vent can be installed in the 4 areas (A, B, C, D) shown in the figure. The following installation steps are based on installing vent in area A as an example.

If you want to install vent in other areas (B,C,D), the pre-inserted screws position needs to be changed accordingly.

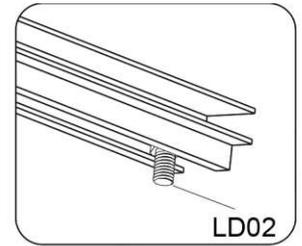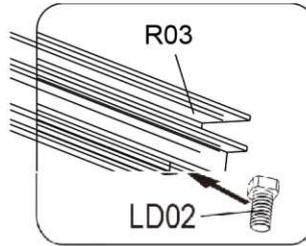
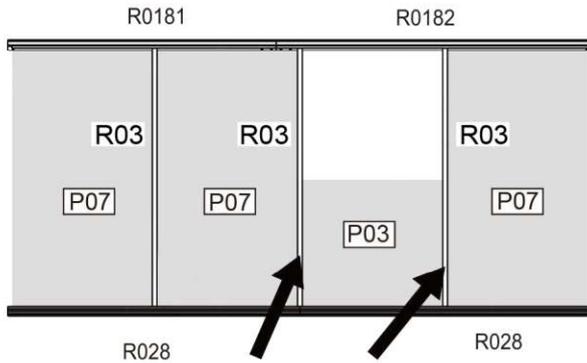


The R03 marked by the Arrow need to be put into 3 bolt LD02 each in advance. The bolt in the middle is prepared for vent assembly. Don't screw the nuts. The remaining SG02 need to be slide in 2 bolts LD02 each in advance.

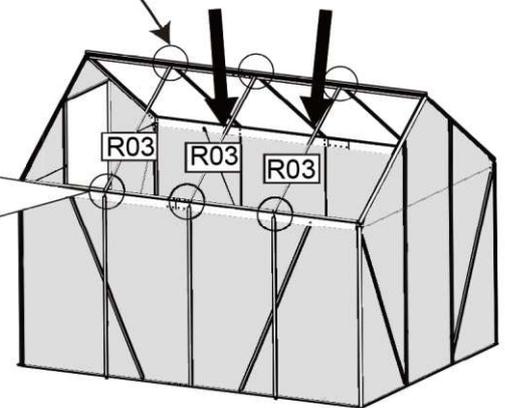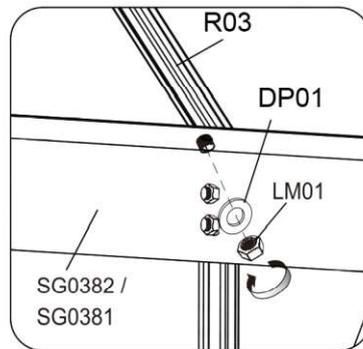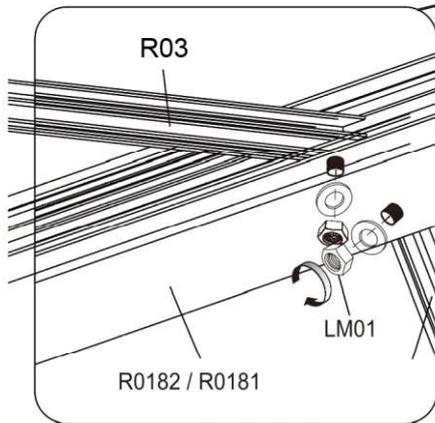

STEP 3

P07*7
P03*1

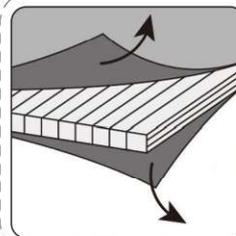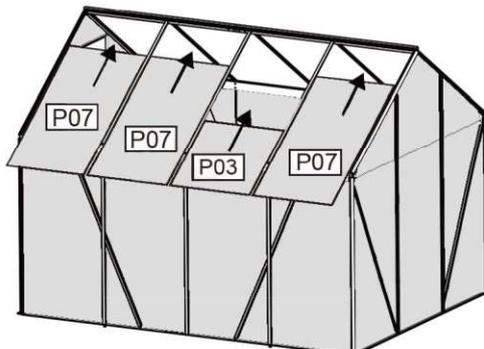

The clear film needs to be exposed to sunlight

Insert the assembled PC panel P07 and P03 from groove.




Note: In the process of inserting the PC Panel, if it is too loose or too tight, you can loosen the nut at the relevant position to properly adjust the position and spacing of the PC Panel, so that the PC panel can be inserted and installed smoothly

STEP 4

R028*4

LD02*10

In this step, 4 pieces R028 will be used, and 2 pieces R028 are installed on same side. The following description is only for one side, and the other side should be installed in the same way. One R028 needs to be slid into 2 bolts LD02 in advance, and the other R028 on the same side needs to be slid into 3 bolts LD02 in advance. Don't screw the nuts.

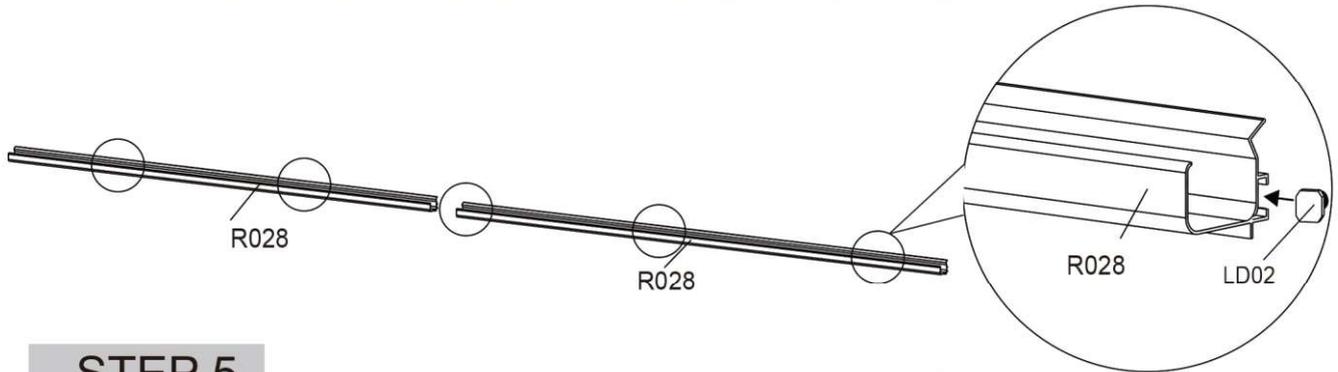


STEP 5

LM01*10

DP01*10

Adjust the position of the bolts to align the bolts with the holes and ensure that the R028 installation position is symmetrical.

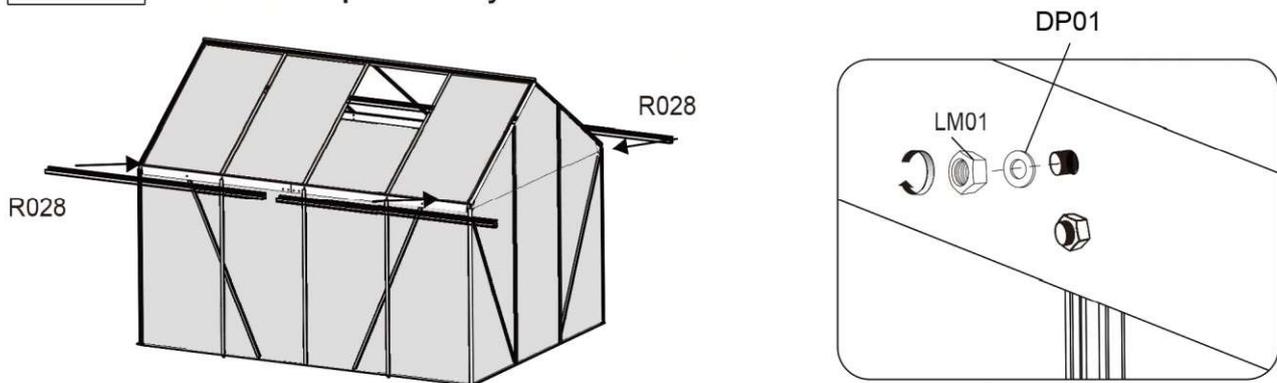


STEP 6

SL04*2

SL05*2

LD05*4

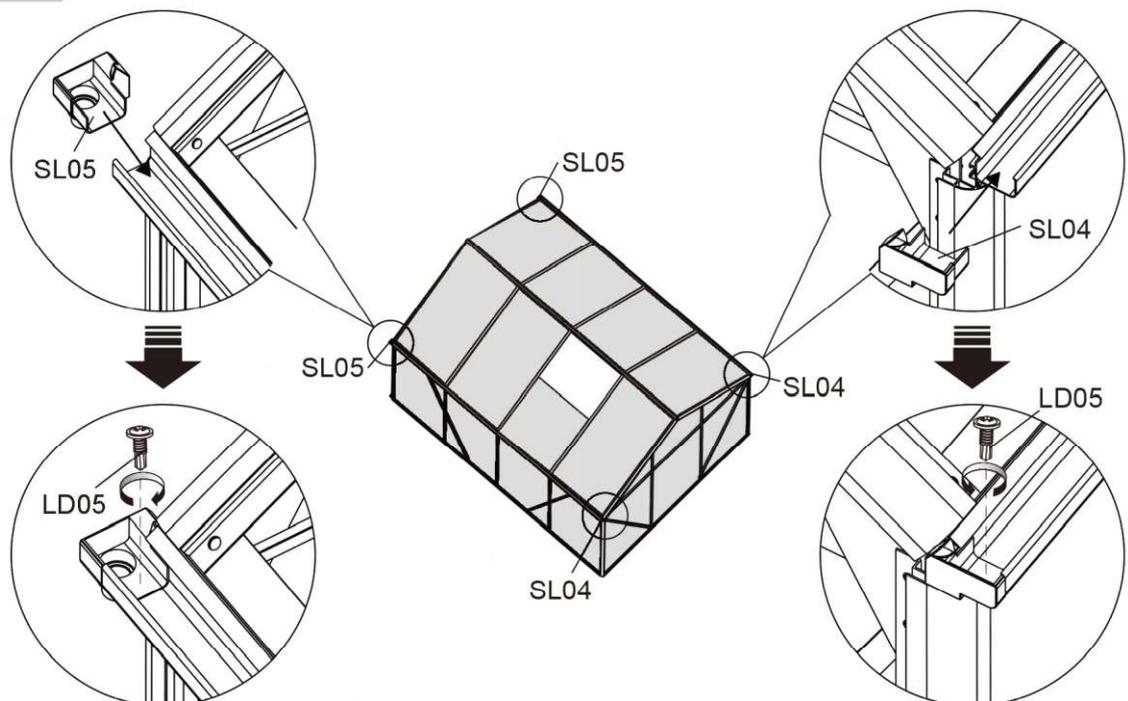


Vent Assembly

V02 1PC 	V03 1PC 	V04 2PCS 	V016 1PC 	V017 1PC 	P09 1PC 20.4"x23"x0.16"
SL01 2PCS 	SL06 1PC 	LD02 4PCS M6x12	LD04 2PCS M4x15	LM01 6PCS M6	LM02 2PCS M4
DP01 6PCS M6					
SL09 1PCS 					



STEP 1

V03*1	DP01*2
V04*2	
LD02*6	
LM01*2	

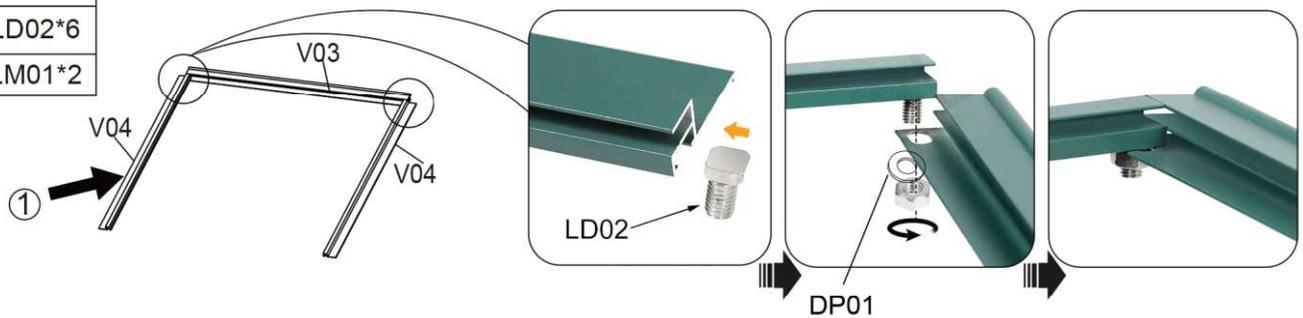

STEP 2




P09*1

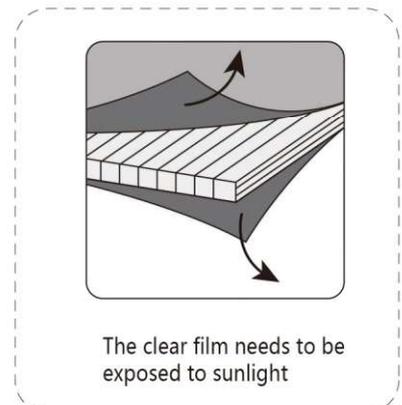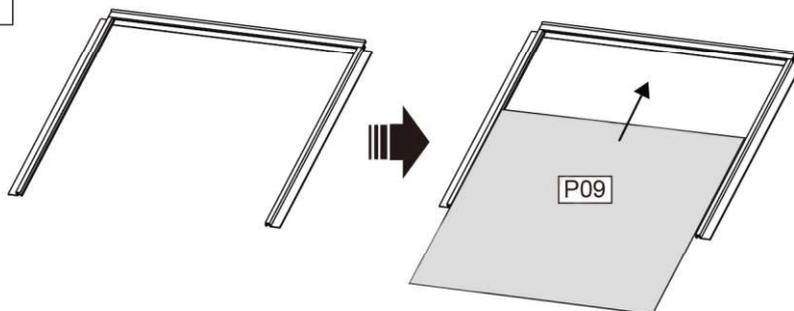

STEP 3





- V02*1
- LD02*2
- LM01*2
- DP01*2

Connect V02 and V04 with the bolt LD02 in V04, and tighten with nuts.

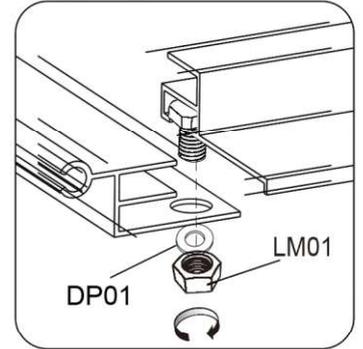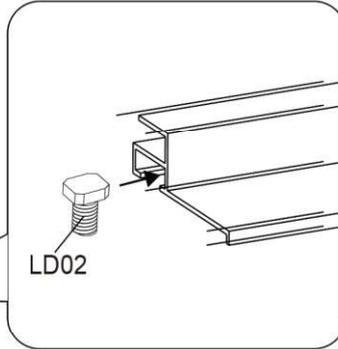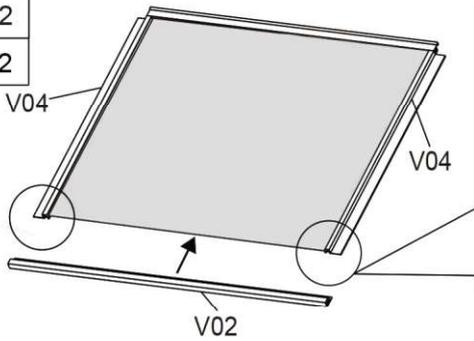

STEP 4



- V017*1
- SL06*1
- LD04*2
- LM02*2
- SL09*1

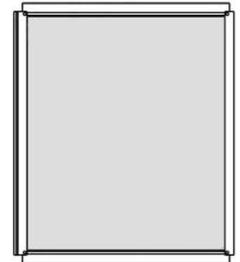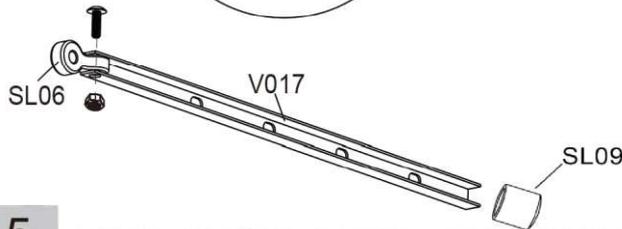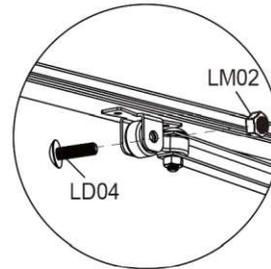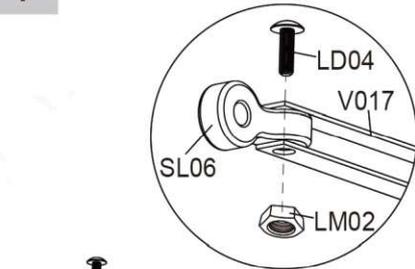



STEP 5

- V016*1
- LM01*2
- DP01*2

Connect V016 with 1 pre-insert bolt LD02 in R03 , and tighten with nuts.

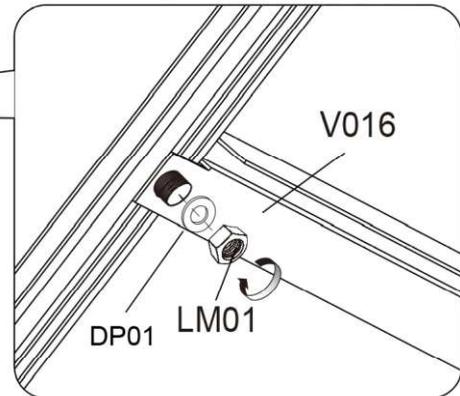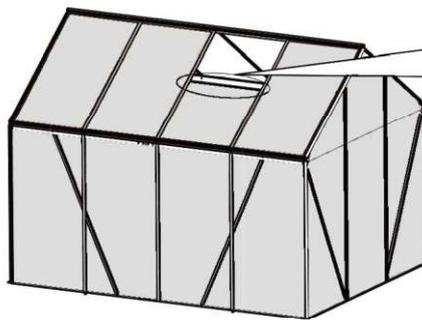


STEP 6

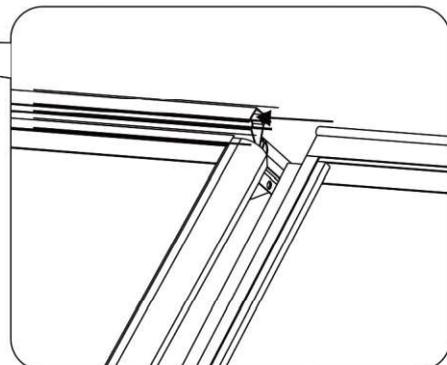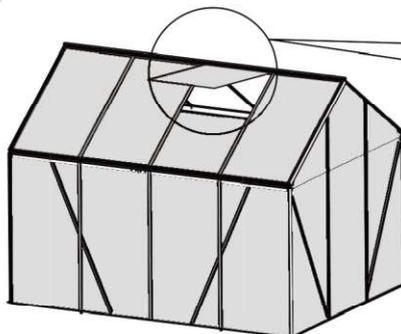

STEP 7

SL01*2


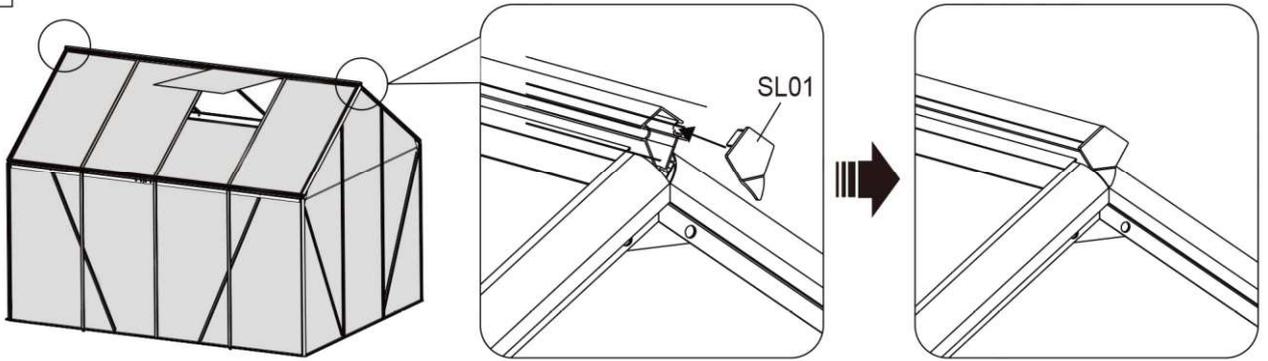


STEP 8






LD06*32


SL07*32

SL08*32

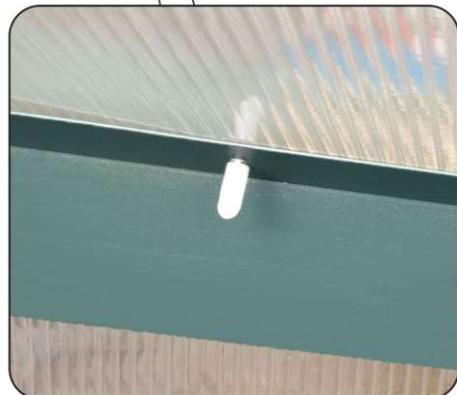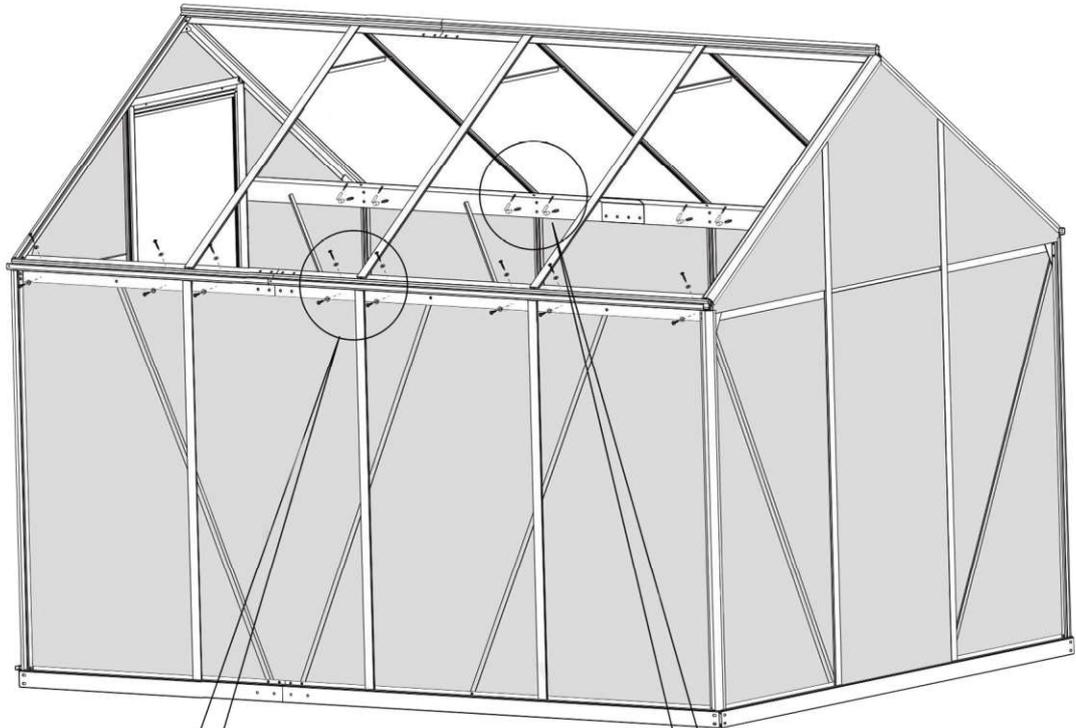


Door Assembly

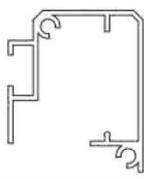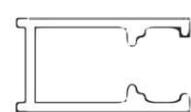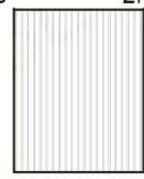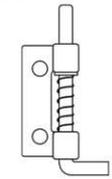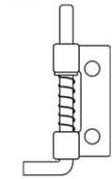D01 	1PC	D02 	1PC	D03 	2PCS	D04 	2PCS	P06  30.7"x24.5"x0.16"	2PCS		
GL01 	2PCS	TP01 	2PCS	CT01 	1PC	CT02 	1PC	LD02  M6x12	2PCS	LD03  ST3.5x25	10PCS
LD07  ST3.2x12	4PCS	LM01  M6	4PCS	LM03  M4	4PCS						

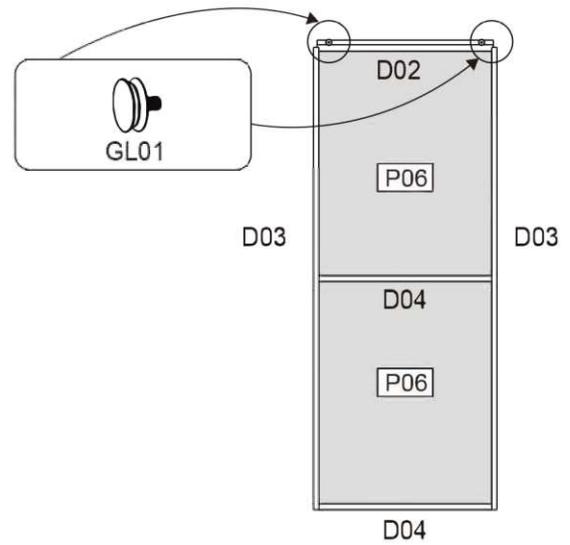

STEP 1



D02*1
D03*2
LD03*2

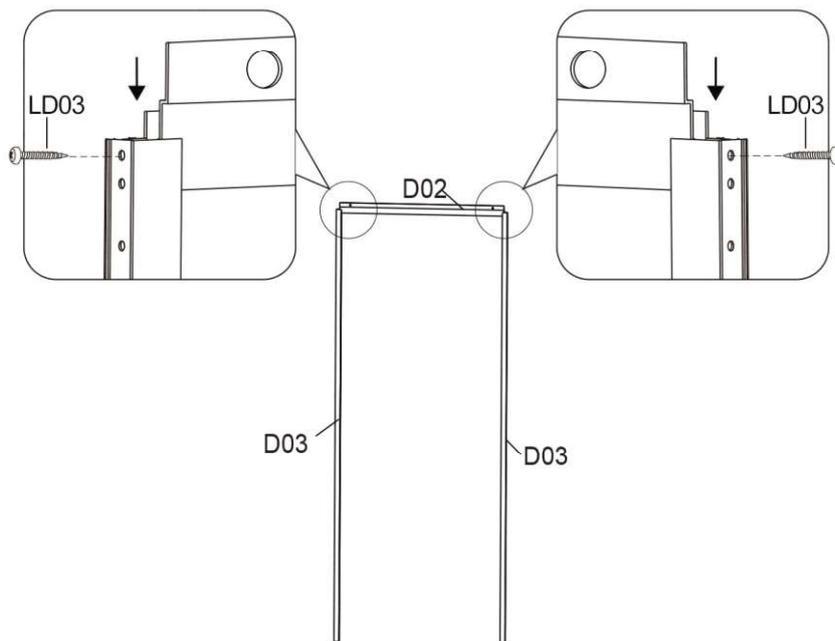

STEP 2


LD07*4
P06*1
CT01*1
CT02*1
LM03*4

Please note that CT01 and CT02 must be installed BY the direction steps as below in the picture.

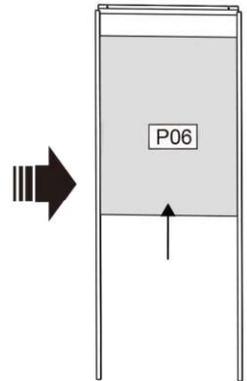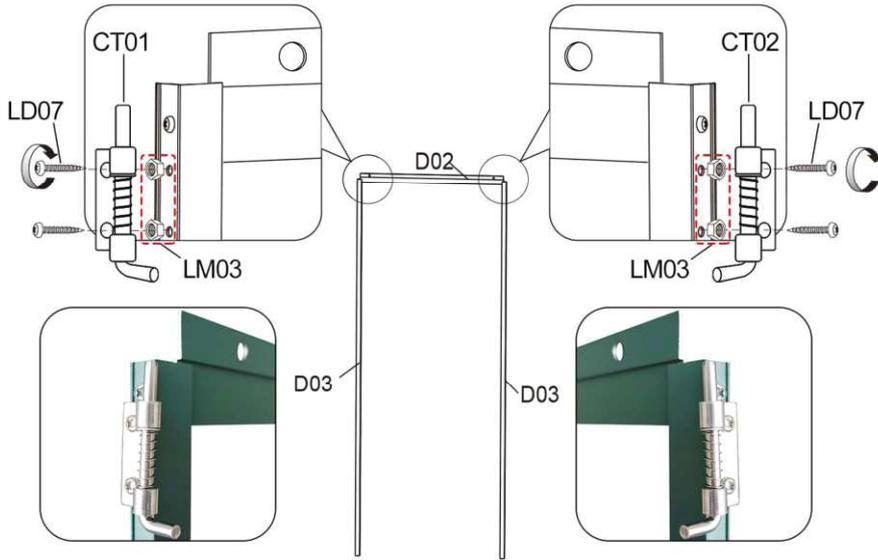


STEP 3

D04*1
LD03*2
P06*1

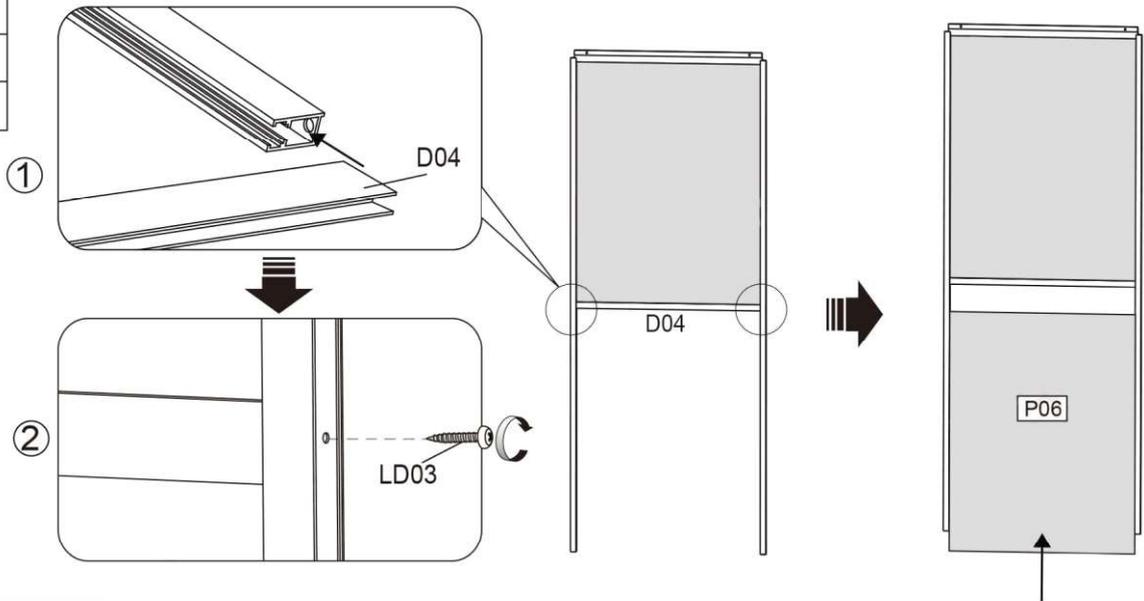


STEP 4

D04*1
LD03*2

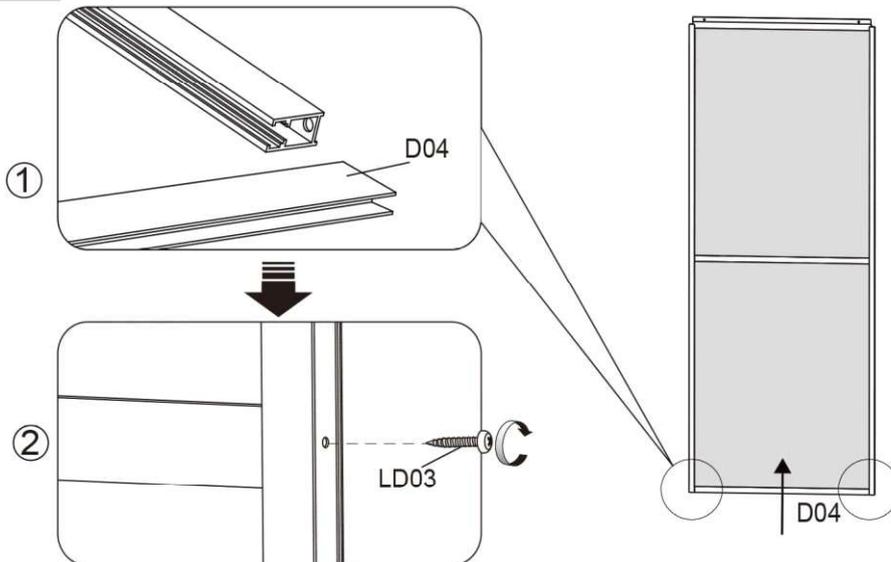



STEP 5

GL01*2
LM01*2
DP01*2

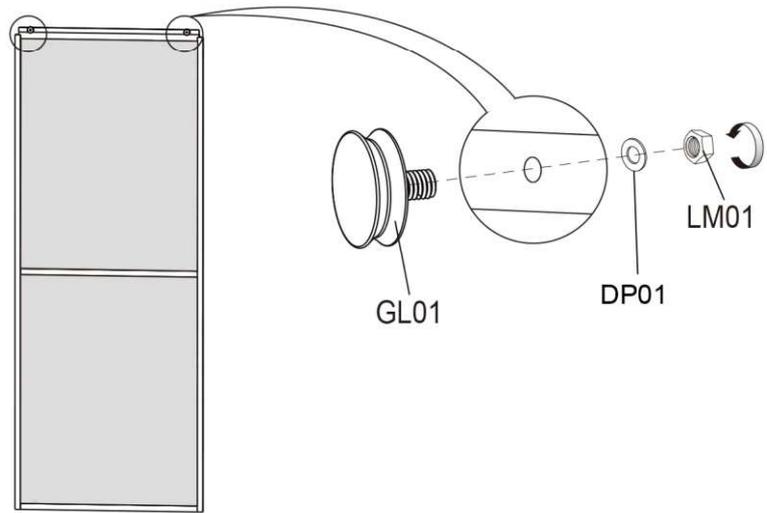


STEP 6

D01*1
LD02*2
LM01*2
DP01*2

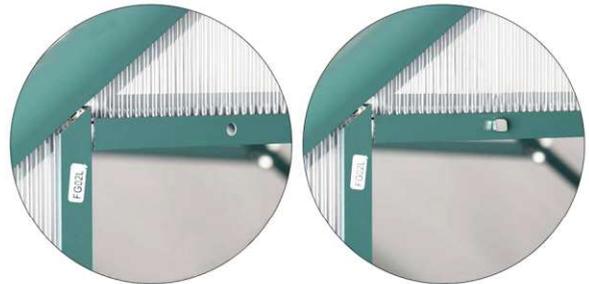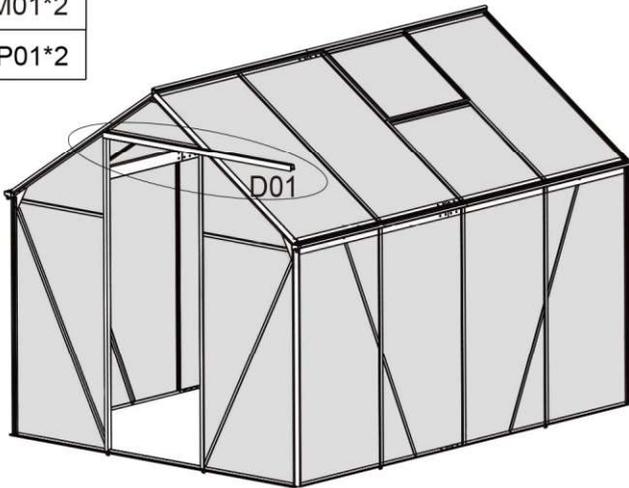



Insert two bolts in FG05. Don't tighten the nuts.

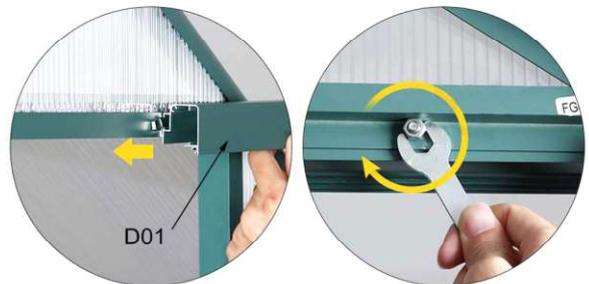

D01 can be installed on left or right.
Slide D01 through the screws on FG05, adjust the position to your needs, finally tighten the nuts.



Note: that Part D01 needs to be kept level so that the sliding door can slide smoothly.
We suggest to measure it levelness after installing D01, and then move to the next step installation.


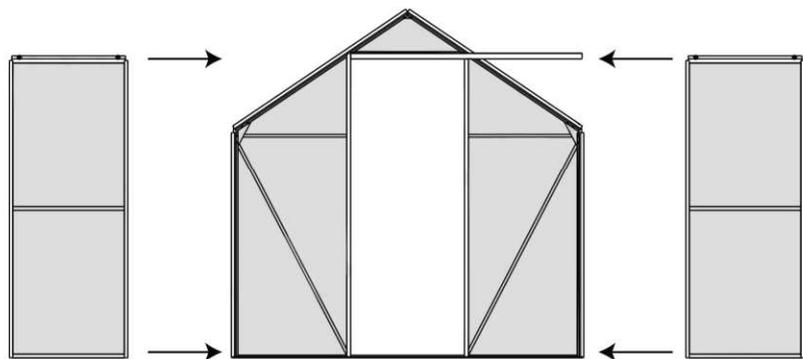
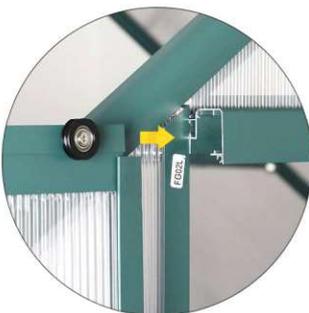


Slide the door in from either side of the D01.


STEP 7

LD03*4

TP01*2

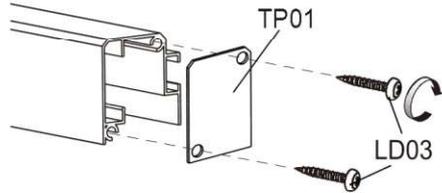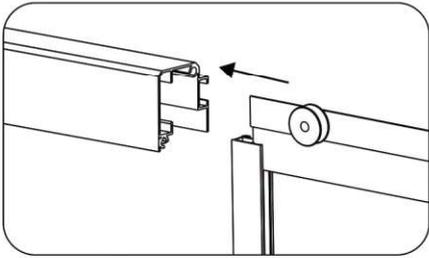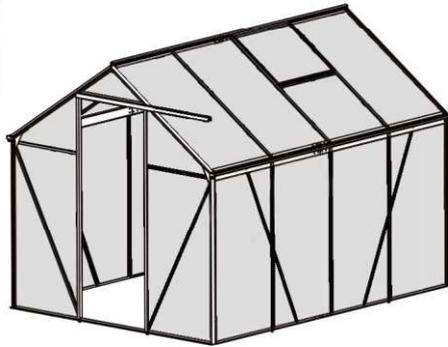

Base Assembly

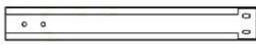B01	2PCS	B028	4PCS	BJ01	BJ02	LD01	LM01	DP01
								
				4PCS	2PCS	M6x12 24PCS	24PCS	24PCS

STEP 1

Connect B028 with the BJ02.

The head of LD02 bolt face outside, and tight the nut LM01 inside.



B028*4

BJ02*2

LD02*8

LM01*8

DP01*8

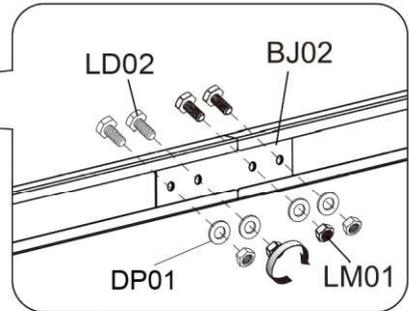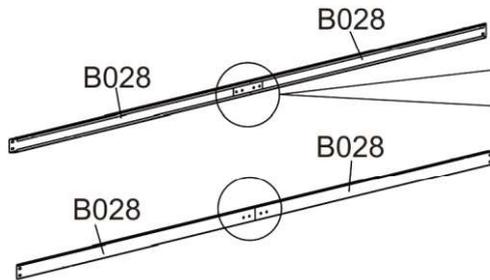

STEP 2

Use BJ01 to connect B01 and assembled Part in step 1 (B028)

The head of LD02 bolt face outside, and tight the nut LM01 inside.



B01*2

BJ01*4

LD02*16

LM01*16

DP01*16

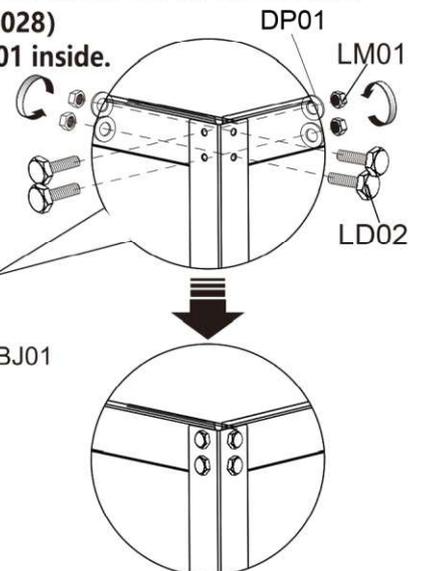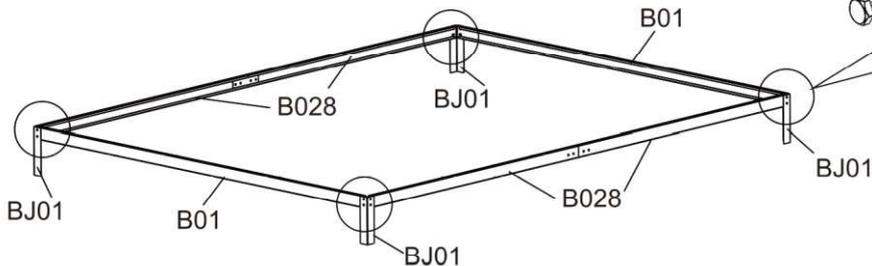


Gutter assembly

KG01*2

SL10*2

ZT*1

ZD*2

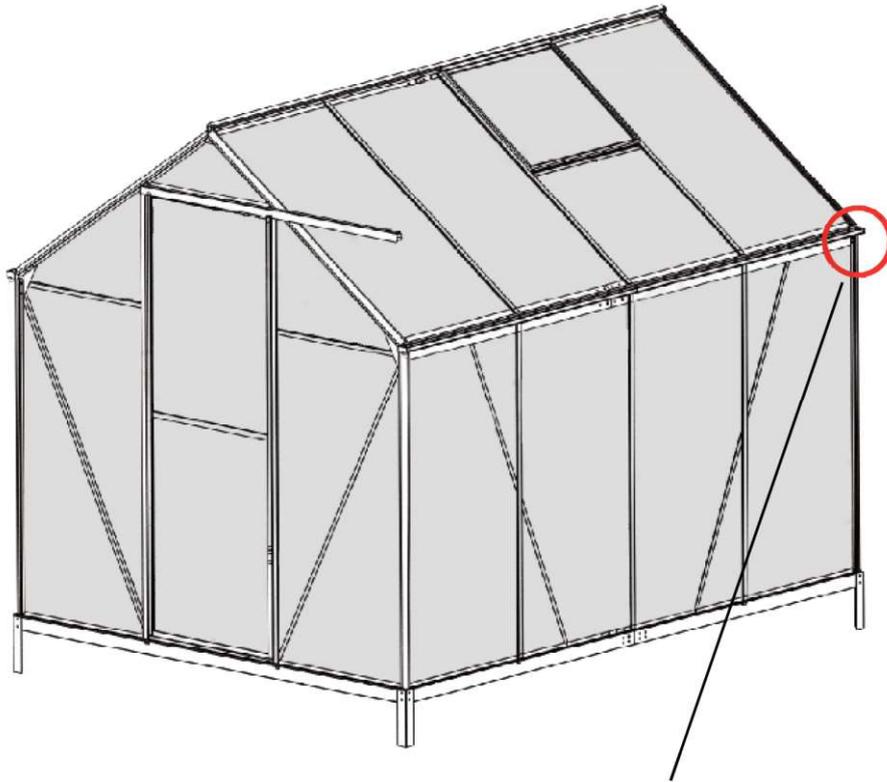

STEP1



STEP2




STEP3





STEP4



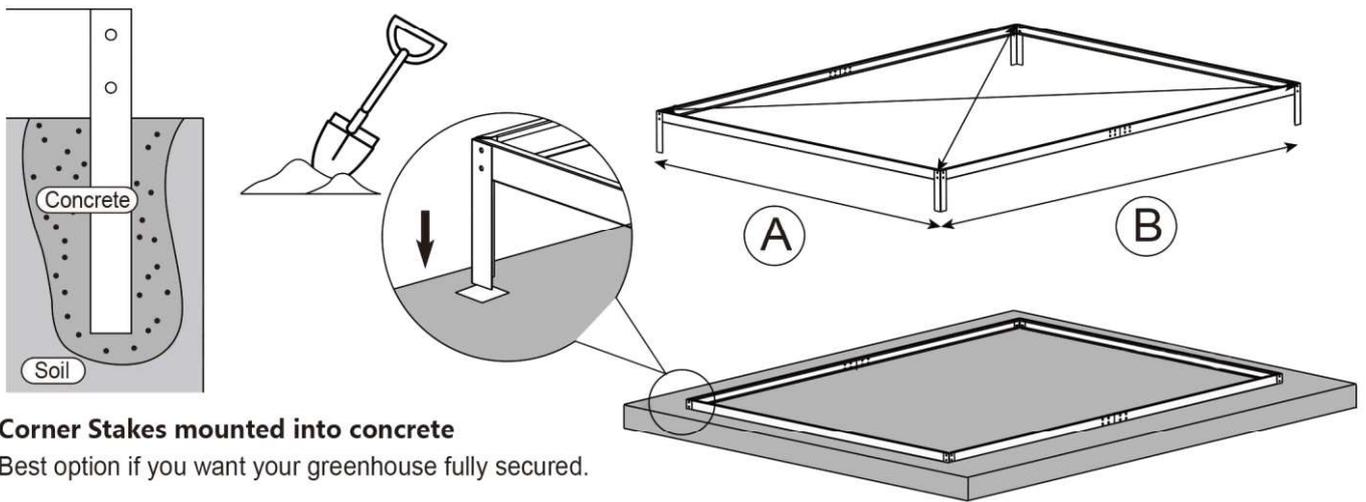


Corner Stakes mounted into concrete
 Best option if you want your greenhouse fully secured.


Base Connector Assembly

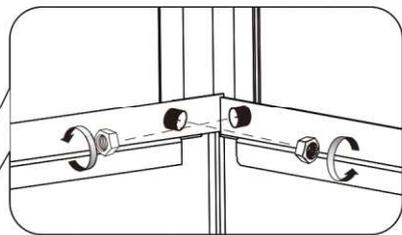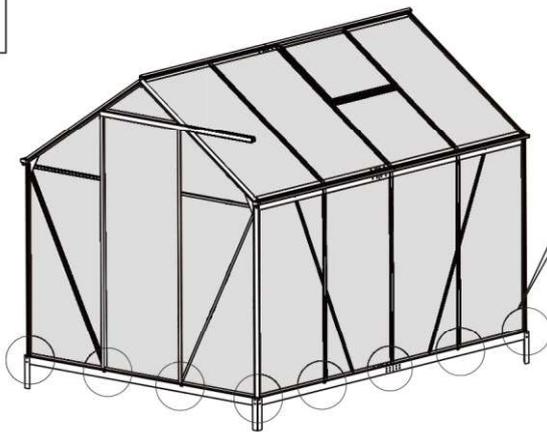

1. Loosen Nuts in position shown in the figure

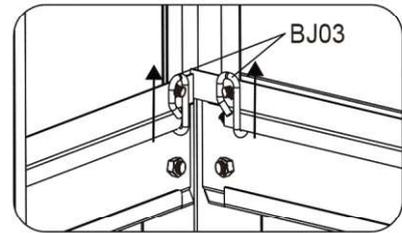

2. Hang the BJ03 connector on the base and lift it up to the bolts

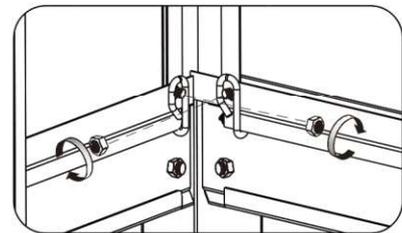

3. Fasten Nuts

Rear Gable side and Front Gable side both needs to install 4 BJ03 connectors.
 The side wall needs to install 7 BJ03 connectors.
 The installation position is as shown in the figure.
 The 8*6 size Green House needs 18 BJ03 connectors in total.